


TESLA

SMARTPHONE 3.1 LITE

QUICK
START
GUIDE

Keys Explained

ENG

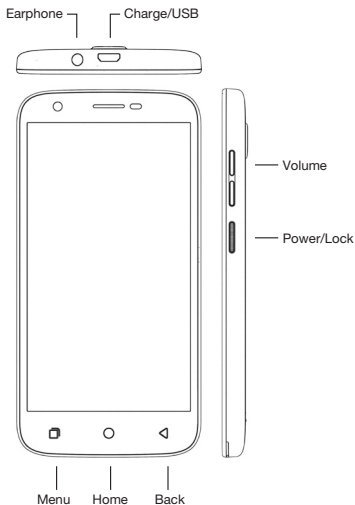

Key	Function
Power Key	<ul style="list-style-type: none">• In order to switch on and off the phone, take a screenshot, adjust audio profile or switch to airplane mode, press and hold the "power" button and choose the desired option.• To change into Sleep mode or to "wake up" your phone press the "power" button.
Home Key	<ul style="list-style-type: none">• Press to return to the Home Screen from any application or screen.• Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Open the Rear Cover

**Open the back cover
as per the arrows direction.**

(Hint: be careful not to injure your fingers!)



How to install SIM and micro SD cards

We recommend you to switch off your phone before installing or replacing SIM or SD card.

1. Remove back cover of the phone
2. Open the SIM or SD card tray like shown on the picture
3. Insert the SIM card into the tray slot in the direction shown on the picture and mind that the card connectors are facing phone connectors. Gently return into the phone.
4. Insert the SD card into the tray, so that the SD card connectors are facing phone connectors. Gently return into the phone and close the tray.
5. Return the back cover until you hear a click.

Inserting Sim card & SD card:

