

TESLA
FEATURE **3**

KORISNIČKO
UPUTSTVO

ENG

USER GUIDE

The following guide is designed to provide you with the most important information on the use of your mobile phone. Please note that certain functions may vary due to modifications and upgrade of software, or due to print mistake.

Thank you for choosing Tesla Feature 3! This device incorporates the latest technology that enables practical daily use in accordance to your needs.

Tesla Feature 3 supports Dual SIM standby, as well as T-FLASH memory card. The device features the following functions : SMS, FM radio, camera, MP3 and MP4. Functions such as alarm, calculator and calendar simplify work and private tasks, video recorder enables you to capture all important moments, while excellent battery provides long standby duration. Use the File Manager to keep track of your files or the MP3 function to select your ringtone - the customizable options cater to various individual needs.

CONTENTS

Key functions	5
Calls	6
Phonebook	6
Call logs	7
Messages	7
Profiles	7
Audio player	7
Games	8
Tools	8
Camera	8
Multimedia	8
Settings	9
File manager	11
Internet	11
Safety instructions	11

KEY FUNCTIONS

Left Soft Key - Press this key to enter the main menu while the device is in the standby mode, press this key to confirm selected function, press this key to answer an incoming call.

Right Soft Key - Press this key to open phonebook while the device is in the standby mode, press this key to go back to the previous menu, press this key to reject an incoming call.

Call Answer Key - Press this key to make a call, press this key to accept an incoming call, press this key to enter Call log while the phone is in the standby mode.

Call End Key - Press and hold this key to switch the phone on and off, press this key to go back to standby mode.

Navigation Key - Use this keys to go through the options and functions. In the standby mode, you can use the navigation key that you have previously customized to access the desired functions.

OK Key - Press this key to confirm a command and get into the main menu.

Numbers Key - Use these keys to make a call, or

to enter numbers and letters in the editing mode. While the phone is in the standby mode, long press the zero (0) key to activate the LED torch.

Asterisk Key * - Press and hold this key in the standby mode to write „+“, or in combination with Left Soft Key to unlock and lock phone keypad. When using the FM radio, press this key to lower the volume.

Hash Key # - In the standby mode press and hold the Hash Key to change settings between general mode and meeting mode. When using the FM radio, press this key to up the volume.

CALLS

When the device is in the standby mode, enter the number you would like to call and press the Call key to make a phoncall from SIM1 or SIM2. To end the call, press the Call end key.

PHONEBOOK

Your phonebook can store up to 500 entries, while SIM card storage capabilities depend on the type of SIM your purchase from your mobile operator. For more information about SIM card storage, please contact your mobile operator.

CALL LOGS

To enter Call logs press the Call key or view your missed and received calls in the main menu. You also have the options to reset or delete your call history.

MESSAGES

Enter this menu to view the following options: Write a new message, Inbox, Draft, Sent Messages, SMS settings. The number of messages that you can save is limited by the phone and memory storage capacity. You can check the storage capacity in SMS settings.

PROFILES

Tesla Feature 3 comes with a several different profile (General, Silent, Loud, Headset, BT) that you can set in accordance to your preferences by swithing options such as ringtone.

AUDIO PLAYER

Open Audio player and press Left soft key to enter the options for adding new or deleting existing content, or to enter the settings option.

GAMES

Tesla Feature 3 comes with two games- F1 Race i Snake.

TOOLS

This function features options such as LED backlight, Calendar, Bluetooth, Alarm, World Clock, Calculator and Unit Converter.

CAMERA

The camera lense is located at the back of the device, while you can view pictures on the front screen. The camera has settings options and all pictures are saved as JPG formats. If your storage is full and the device does not let you take new pictures, free up storage space by deleting old photos using File manager. While viewing pictures on your PC, make sure that you have the right viewer software.

MULTIMEDIA

Video recorder

Press the OK taster to start recording videos. The lenght of a video clip depends on the amount of storage space on the memory card. Open

Setting to choose the following options: „Switch to camera“, „Video Recorder Settings“ and „Save“.

Video player

Enter the video player applications and press Left Soft Key to access the following options: „Play“, „Send“, „Rename“, „Delete“, „Delete all files“ and „Save“ .

Image viewer

Enter the Image Views application and press Left Soft Key to access the following options : „View“, „Send“, „Set as“, „Rename“, „Delete“, „Save“ and „Image information“.

FM radio

To set up the FM radio, use the following options : „Channel list“, „Manual settings“, „Auto search“, „Settings“, „Record“ and „File list“.

Voice recorder

Enter the Voice recorder application and press Left Soft Key to access the following options: „New recording“ and „List“.

SETTINGS

- In this menu you can find the settings for SIM1/ SIM2 cards, as well as Advanced settings with

the following options: Black list, Auto call history, Auto redial, Call time reminder, Call reject with SMS and Answer mode.

- Enter the Display settings menu to set up Wallpaper, LCD backlight, Keypad lighting, Show data and time and Operator name.
- Enter the Phone settings menu to set up Time and data, Schedule power on and off, Languages, Preferred input method, Shortcuts, Key Customization, Auto time update, Flight mode.
- The mobile phone supports multiple language, with English as the default language.
- To protect your privacy, the Security Settings have the following options: SIM1/SIM2 security, lock screen with any key, Screen auto lock, Phone Security, Phone Tracker and Data Protection.
- Enter the Network Settings to choose a mobile operator network for your SIM card.
- Dual SIM settings : In this menu you can customize options for two SIM CARDS, depending on whether you want to use only one or both at the same time.
- The Connectivity menu allows you to

customize your data accounts.

- The Restore factory settings is an option you can use to reset your phone to factory conditions and erase all data from the device. The password to restore factory settings is: 1234.

FILE MANAGER

File manager enables you to manage files stored in your phone and external memory card. You can use this menu to manage pictures, MP3s and other files.

INTERNET

This menu enables you to access the Internet.

SAFETY INSTRUCTIONS

Prior to using this phone, please read the following safety instructions:

1. Do not use the phone while driving a car.
2. Keep the mobile device and phone accessories away from children.
3. Mobile phones can affect medical devices such as pacemakers and hearing aids.
4. Users with active medical implants are

advised to keep their phone at a minimum distance of 15 cm from the implant.

5. Using earphones or headphones at a high volume can cause permanent hearing damage or loss of hearing.
6. Use a Hands free system with a low power Bluetooth emitter.

TESLA

www.tesla.info