

AIR-TO-WATER SPLIT TYPE HEATPUMP INDOOR UNIT (HYDRONIC MODULE)

TOUCH SCREEN WIRED CONTROLLER





Ver. 2023

ENG

POL

OPERATING INSTRUCTION

Note: All the pictures in this manual are just schematic diagrams, the actual is the standard. Please read this owner's manual carefully and thoroughly before operating the unit! Take care of this manual for future reference.

INSTRUKCJA OBSŁUGI

Uwaga: Wszystkie zdjęcia w tej instrukcji to tylko schematy, rzeczywisty jest standardem. Prosimy o uważne i dokładne przeczytanie niniejszej instrukcji obsługi przed uruchomieniem urządzenia! Zachowaj niniejszą instrukcję na przyszłość.



ENG

This wired controller is used for communicating with the system main board, controlling the operating status of the system through touch keys, and displaying the working status of the whole system through its LCD screen.

The wired controller and the main board will check whether the communication is successful within 1 minute after power-on. If the communication is not successful, the main control board (30 seconds) and the wired controller will alarm the communication fault. If the communication is successful later, the alarm fault is restored and normal operation control is restored.



BUTTONS / INDICATOR

- 1. Mode Setting
- 2. Electric auxiliary heating
- 3. Temperature +
- 4. Temperature -
- 5. Setting
- 6. OK
- 7. ON/OFF
- 8. Query
- 9. Left digital tube
- 10. Middle digital tube
- 11. Right digital tube



Ø	Anti-freezing	*	Error	*	Cooling mode ON
٨	External heat source (Reserved)		Weekly timer		Heating mode ON
3	Hydronic module heater	9	Clock	F	DHW mode ON
بلاز	Water tank heater	A	Auto function		Outdoor temp.
ON	Timer ON	OFF	Timer OFF		Indoor temp.
*	Cooling mode	¢	Heating mode		DHW mode
SÜN	Day	88,	Time / temp.	_	Holiday mode

Notes on using conditions:

- 1. Power supply: AC 220V±30%, the main board of hydronic module supplies power to the wired controller.
- 2. Working environment temperature: -30°C~+50°C.
- 3. Working environment humidity: RH10%~RH95%.
- 4. Ouch any key when the screen is off to light up the screen

Press this button to turn the unit on or off.





Press this button to return to main interface.

Press button to confirm the settings, exit all interfaces of setting or query and return to the main interface.



Mode

Press this button to select the mode.

1. When DHW mode is OFF.

When the main interface is turned on or there is a timing state, press press button: Only heating model: the wired controller can only select heating mode;

Heat pump model: it will be selected heating - cooling - heating.

2. When DHW mode is ON.

When the main interface is turned on or there is a timing state, press button: Only heating model: the wired controller can only select heating mode, DHW mode and heating + DHW combination mode;

Heat pump model: it will be selected heating - DHW - cooling - cooling + DHW - heating + DHW - heating.

3. Sterilization mode

Long press putton, the water tank heater icon displays 5S, and the hightemperature sterilization mode is manually activated (DHW mode or cooling (heating) + DHW combination mode).

NOTE:

- The only heating model or heat pump model is selected by the SW2_1 dial of the hydronic module PCB, the factory default is heat pump model.
- The domestic hot water mode is selected by the SW2_4 dial of the hydronic module PCB, the factory default is with DHW mode.





Query

Press this button to check the data.

Press \bigcirc button to enter the query status, press \bigcirc button or no operation for 5 seconds to exit the query interface and return to the main interface. Press \bigtriangleup button in the query status, it will show these data in turn:

1. Ts1: AC side setting water temperature;

- 2. Ts2: Domestic hot water setting temperature;
- 3. Tw_in: Water inlet temperature of heat exchanger;
- 4. Tw_out: Water outlet temperature of heat exchanger;
- 5. T1: Water outlet temperature of hydronic module;
- 6. T4: Ambient temperature;
- 7. T6: Temperature detected by temperature probe of wired controller;
- 8. T7: Water tank temperature;
- 9. Capacity of hydronic module;
- 10. Operating capacity demand of hydronic module;
- 11. Water pump gear.

NOTE:

- When the hydronic module SW2_4 is ON: select without domestic hot water function, Ts2 and T7 will show 0.
- The unit of horsepower is 0.1. For example, for 5HP hydronic module, spot check No.9 parameter should be 50.

Press this button to turn the heater on or off.

Press \geqslant button when the heating mode is turned on in the main interface or the timer heating mode is on. The hydronic module heater icon \ge is displayed.

Press button again, the hydronic module heater icon lis not displayed. Press button when the domestic hot water mode is turned on in the main interface or the timer domestic hot water mode is turned on. The water tank heater icon lis displayed. Press button again, the water tank heater icon lis not displayed. Long press button, the main interface will display "dF" for 5 seconds, this is the forced defrosting function. Wait for 5 seconds to automatically exit the interface.



Temperature +

Press this button to set temperature and time.

1. Temperature setting.

Press \bigtriangleup button for the first time in the main interface in the cooling and heating mode to enter the air-conditioning temperature Ts1 setting interface; In DHW mode, press \bigtriangleup button for the first time to enter the domestic hot water temperature Ts2 setting interface;

Press A button once to increase the setting temperature by 1°C. When the setting temperature reaches the highest value, press the button again that the setting temperature won't change.

In the combination mode of domestic hot water and cooling(heating), after pressing \bigwedge button for the first time, the water temperature flashes and enters the airconditioning temperature Ts1 setting interface. Press \bigwedge button or no operation for 5 seconds, water tank temperature flashes, enter the domestic hot water temperature Ts2 setting interface. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface. In the combination mode of domestic hot water and cooling(heating), press \bigotimes button continuously within 5 seconds to enter the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface.



Electric auxiliary heating



Temperature -

Press this button to set temperature and time.

1. Temperature setting.

Press \bigvee button for the first time in the main interface in the cooling and heating mode to enter the air-conditioning temperature Ts1 setting interface; In DHW mode, press \bigvee button for the first time to enter the domestic hot water temperature Ts2 setting interface;

Press V button once to decrease the setting temperature by 1°C. When the setting temperature reaches the lowest value, press the button again that the setting temperature won't change.

In the combination mode of domestic hot water and cooling (heating), after pressing $\bigvee i$ button for the first time, the water temperature flashes and enters the airconditioning temperature Ts1 setting interface. Press $\bigvee i$ button or no operation for 5 seconds, water tank temperature flashes, enter the domestic hot water temperature Ts2 setting interface. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface. In the combination mode of domestic hot water and cooling(heating), press \bigotimes button continuously within 5 seconds to enter the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface of the current operating mode. Press \bigotimes button or no operation for 5 seconds, then exit the temperature setting interface.

NOTE:

Digital tube display:

- When there is DHW mode: When in standby, the left digital tube displays the water outlet temperature T1 of hydronic module, and the middle digital tube displays the temperature T7 of water tank. When setting the temperature, the left digital tube displays AC side setting water temperature Ts1 and the middle digital tube displays Domestic hot water setting temperature Ts2.
- When there is no DHW mode: When in standby and setting temperature, the left digital tube displays the water outlet temperature T1 of hydronic module, and the middle digital tube displays AC side setting water temperature Ts1.

Press this button to set different functions.



1. Clock.

Short press 🔅 button, the clock icon 🕘 flashes. When the clock icon flashes, short press 📀 button, the current time is displayed on the right side, the clock icon becomes constantly on, and it automatically exits after 10 seconds; When the clock icon flashes, long press 🕟 button to enter the time setting interface.

Setting

2. Weekly timer.

Press O button twice, the weekly timer icon O flashes;

When the weekly timer icon flashes, short press 📎 button to enter the weekly timer viewing interface;

In weekly timer viewing interface, press or button to check:

- 1. Timer on: the digital tube displays the timer on time;
- 2. Timer on: the digital tube displays the timer setting temperature;

3. Timer off: the digital tube displays the timer off time.

When the weekly timer icon flashes, long press \bigodot button to enter the weekly timer setting interface.

3. Power-down memory setting.

- Press 🔅 button three times, middle digital tube displays 1, meaning the controller with power-down memory (default). Press 🖉 🛛 or 🏹 🗊 button, when it displays 0, meaning the controller without power-down memory.
- Press (); button three times, after middle digital tube display 1 or 0, long press (); button, in order to clear weekly setting and reset the controller.

ENG

4. WiFi configuration (for the wired controller with WiFi function)

- Press 🔅 four times, (A) icon flashes. Long press setting button 🔅 and then the middle digital tube show 0, which means the controller is in configuration states.
- Add the heat pump in Tuya APP according to pictures below. Download Tuya Smart APP -> Add a device (choose "Large Home Appliances" - "Air Conditioner")
 ->Connect a WiFi -> input the WiFi password to connect to WiFi ->Connecting -> Heat pump is added successfully.

NOTE:

Time setting:

Press
 button to enter the clock setting interface. At this time, the clock day icon flashes and the day of the week can be set. After selecting the day, press
 button and the hour(left digital tube) icon flashes and the hour can be set. Then press
 button, the minute (middle digital tube) icon flashes, you can set the minute value, press
 button to complete the setting and exit the time setting operation, and return to the main interface.





Setting

Press this button to set different functions.

5. weather compensation function (auto function)

Wired controller setting steps

- a. Short press setting button 6 times, set the middle digital tube to 1, press "confirm" button. (A) is ON. 1(with auto function)/0(without auto function)
- b. Select heating climate curve, 0~13, 0-no curve, 1~12-curve 1~12, 13-custom curve. If choose 1~12, press "confirm" button, then go to step f; if choose 13, press "confirm" button, then go to step c.
- c. Customized heating curve value input. Press "up" or "down" button to set Min OAT, Max OAT, Min WSP, Max WSP value one by one. After setting one value, short press "confirm" button to next. After finishing 4 values setting, then go to step d.
- d. Select cooling climate curve, 0~3, 0-no curve, 1~2-curve 1~2, 3-custom curve. If choose 1~2, press "confirm" button then go to step g; if choose curve 3, press "confirm" button then go to step e.
- e. Customized cooling curve value input. Press "up" or "down" button to set Min OAT, Max OAT, Min WSP, Max WSP value one by one. After setting one value, short press "confirm" button to next. After finishing 4 values setting, then finish all settings.
- f. Press "up" or "down" button to set the heating climate curve offset from -5~5°C, default as 0°C; then press "confirm" button to go to step d;
- g. Press the "up" or "down" button to set the cooling climate curve offset from -5~5°C, default as 0°C; then press "confirm" button to confirm and exit.



Curve	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
К1	20	40	5	10
К2	20	40	10	18

Custom curve

Curve	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
КЗ	0~30	24~50	5~20	5~20



Curve	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
К1	- 7	20	20	38
K2	- 5	20	20	33
К3	- 9	20	20	45
К4	- 8	20	40	50
К5	- 5	20	40	55
К6	0	20	40	60
К7	- 20	20	22	42
K8	- 20	20	23	55
К9	- 12.5	20	24	60
K10	- 6	20	25	60
K11	- 1.5	20	26	60
K12	3.5	20	27	60

Custom curve

Curve	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
K13	- 30~10	10~30	25~40	30~60



Weekly timer

Press this button to set the weekly timer.

Enter the weekly timer setting mode, \bigcirc icon flashes, press $\land \downarrow$ or $\lor \downarrow$ button to select **ON** or **OFF**, and press \oslash button, at this time \bigcirc con is always on, and enter the boot time setting.

Long press \land \bigcirc or \checkmark \bigcirc button to switch setting items. When the **ON** icon is always on, **SUN** icon starts to flash (flashing indicates that the setting is adjustable), short press \land \bigcirc or \checkmark \bigcirc button to switch from **SUN-SAT**. After selecting a day, press \bigcirc button and the icon will be on. Press \bigcirc button again to cancel the selection, the icon flashes, and you can reset it.

After finishing setting the days, the selected day's icon is always on (if no day is selected, the currently flashing day will be selected). Long press \checkmark button, at this time "Hour" (left digital tube, initial value is 08, if it has been set, the last set value is displayed, the temperature unit is not displayed) flashes, short press \land or \checkmark button to select the time (00-23), short press \bigcirc button, the number is always on. Press \bigcirc button again to cancel the selection, the icon flashes, and you can reset it.

After "Hour" setting is completed, long press \checkmark button. At this time, "Minute" (middle digital tube, initial value is 00, if it has been set, the last set value is displayed, temperature unit is not displayed) flashes, short press \land for \checkmark to select the time (00-59). Short press \diamond button, the number is always on. Press \diamond button again to cancel the selection, the icon flashes, and you can reset it.

After the time setting is completed, long press $\forall j$ to enter the timer mode setting.

Short press \clubsuit button, **Heating** icon flashes \rightarrow **DHW** icon flashes \rightarrow **Cooling** icon flashes \rightarrow **Cooling** and **DHW** icons flash simultaneously \rightarrow **Heating** and **DHW** icons flash simultaneously. (Only the internal icon flashes, the box does not flash.)

Press \bigcirc button to select the mode, the corresponding icon is always on, and the corresponding digital tube flashes. Press \bigcirc button again to cancel the selection, the icon flashes, and you can reset it.

When the mode icon flashes, the temperature value is always on and displayed as the last set value. If it has never been set, the default cooling value is 7° C, the heating value is 45° C, and the hot water value is 50° C.

Temperature setting:

• If only cooling or heating mode is set:

Long press $\forall j$ button to enter temperature setting interface.

The left digital tube flashes. Short press $\bigtriangleup i$ or $\checkmark i$ button to set different target water temperatures in cooling or heating mode. Press \oslash button to select the setting temperature value, and the value is always on.

(The initial temperature setting value is the last setting temperature or the default temperature.

• If only DHW mode is set:

Long press $\forall j$ button to enter temperature setting interface.

The middle digital tube flashes. Short press \bigwedge or \bigvee button to set different target water temperature in the domestic hot water mode. Press \bigotimes button to select the setting temperature value. (The initial temperature setting value is the last setting temperature or the default temperature.)



Weekly timer

Press this button to set the weekly timer.

• If the combination mode is set:

Long press $\forall j$ button to enter temperature setting interface.

The left digital tube flashes. Short press \bigwedge or \bigvee button to set different target water temperatures in cooling or heating mode. Press \bigotimes button to select the setting temperature value, and the value is always on. Press button again to cancel the selection, the icon flashes, and you can reset it.

Long press \checkmark button, the middle digital tube flashes, short press \land or \checkmark button to set the indoor target water temperature in the domestic hot water mode. Press \bigcirc button to select the setting temperature value, and the value is always on. Press \bigcirc button again to cancel the selection, the icon flashes, and you can reset it.

(The initial temperature setting value is the last setting temperature or the default temperature.)

After the temperature setting is completed, long press button, and return to the weekly timer setting mode (**ON** or **OFF**), and you can select the timer OFF to enter the OFF time setting interface.

When the \square icon is always on, Long press $\forall \square$ button to select days for timer shutdown. Short press $\land \square$ or $\forall \square$ button to switch from **SUN-SAT**. After selecting a day, press \bigcirc button and the icon will be on. Press \bigcirc button again to cancel the selection, the icon flashes, and you can reset it.

After select days, long press $\forall j$ button, left digital tube flashes, set timer shutdown hour. Short press \bigcirc button to select the time, short press \bigcirc button again to cancel.

After setting the "Hour", long press \checkmark button. At this time, "Minute" (middle digital tube, initial value is 00, displays the setting value of the boot time, temperature unit is not displayed) flashes, and short press \land or \checkmark button to select time, 00-59), short press \diamond button, the number is always on.

Long press \oslash button to complete the weekly timer setting.

Error code

Error code	Description	Error code	Description
EO	Water flow switch failure	E8	Heat exchanger water outlet temperature sensor Tw_out malfunction
E1	E1 Communication failure between hydronic module and outdoor unit		Communication failure between hydronic module and wired controller
E2	E2 Water outlet temperature sensor T1 malfunction		Mode conflict
E5	Outdoor unit failure	PO	EEPROM protection
E6 Water tank temperature sensor T7 malfunction		P1	Excessive temperature difference between water inlet and outlet protection
E7	Heat exchanger water inlet temperature sensor Tw_in malfunction	P2	Water shortage protection

Spot check

No.	Description	Notes
1	AC side setting water temperature Ts1	
2	Domestic hot water setting temperature Ts2	When the hydronic module is without domestic hot water function, it will show 0.
3	Water inlet temperature of heat exchanger Tw_in	
4	Water outlet temperature of heat exchanger Tw_out	
5	Water outlet temperature of hydronic module T1	
6	Ambient temperature T4	
7	Temperature detected by temperature probe of wired controller T6	
8	Water tank temperature T7	When the hydronic module is without domestic hot water function, it will show 0.
9	Capacity of hydronic module	Capacity (HP) = value * 0.1
10	Operating capacity demand of hydronic module	Capacity (HP) = value * 0.1
11	Water pump gear	

Uwaga: Wszystkie zdjęcia w tej instrukcji są tylko schematami, co jest standardem. Prosimy o uważne i dokładne przeczytanie niniejszej instrukcji obsługi przed uruchomieniem urządzenia! Zachowaj tę instrukcję do wykorzystania w przyszłości. Przewodowy sterownik służy do komunikacji z płytą główną urządzenia, kontrolowania stanu pracy za pomocą przycisków i wyświetlania stanu pracy całego systemu na ekranie LCD.

Sterownik przewodowy i płyta główna sprawdzą, czy komunikacja powiodła się w ciągu 1 minuty po włączeniu zasilania. Jeśli komunikacja nie powiedzie się, jednostka sterująca i sterownik przewodowy wyświetlą błąd komunikacji (po 30 sekundach). Jeśli komunikacja zostanie nawiązana później, wyświetlony błąd zniknie i zostanie przywrócona normalna funkcjonalność.



PRZYCISKI / WSKAŹNIKI

- 1. Wybór trybu pracy
- 2. Ogrzewanie elektryczne
- 3. Temperatura +
- 4. Temperatura -
- 5. Ustawienia
- 6. OK

POL

- 7. Włącz / Wyłącz
- 8. Wyszukiwanie
- 9. Lewy wskaźnik
- 10. Środkowy wskaźnik
- 11. Prawy wskaźnik



8	Odmrażanie	×	Błąd		Tryb chłodzenia włączony
٨	Zewnętrzne źródło ciepła (rezerwowe)		Timer tygodniowy		Tryb ogrzewania włączony
3	Grzałka jednostki wew.	9	Zegar	K	Tryb CWU włączony
} ₽	Grzałka zasobnika CWU	A	Funkcja automatyczna		Temperatura otoczenia
ON	Timer włączony	OFF	Timer wyłączony		Temperatura obiektu
**	Tryb chłodzenia	¢	Tryb ogrzewania		Tryb CWU (DHW)
SÜN	Dzień	88,	Czas / Temperatura	_	Tryb wakacyjny

Uwagi dotyczące użytkowania

- 1. Zasilanie: AC 220V ±30%, płyta główna jednostki wewnętrznej przekazuje zasilanie do przewodowego sterownika.
- 2. Temperatura pracy: -300C ~ 500C
- 3. Dopuszczalna wilgotność powietrza: RH10% ~ RH95%
- 4. Dotknij jakiegokolwiek przycisku aby włączyć podświetlenie ekranu.

Naciśnij ten przycisk aby włączyć lub wyłączyć jednostkę





Naciśnij ten przycisk aby powrócić do ekranu głównego

Naciśnij 🕢 aby zatwierdzić ustawienia, wyjść ze wszystkich kategorii i zapytań i powrócić do ekranu głównego.



Press this button to select the mode.

1. Gdy tryb CWU (DHW) jest WYŁĄCZONY

Będąc na ekranie głównym, naciśnij przycisk 😤 : Model podgrzewający tylko: sterownik przewodowy może wybrać jedynie tryb ogrzewania; Model pompy ciepła: zostanie wybrane grzanie - chłodzenie - grzanie.

Tryb

2. Gdy tryb CWU (DHW) jest WŁĄCZONE

Będąc na ekranie głównym, naciśnij przycisk 🐲: DHW - cooling - cooling + DHW - heating + DHW - heating (odpowiednio) CWU - chłodzenie - chłodzenie + CWU - ogrzewanie + CWU - ogrzewanie

3. Tryb sterylizacja

Naciśnij i przytrzymaj przycisk 🚏 , ikona zasobnika CWU wyświetli 5S, a tryb sterylizacji wysoką temperaturą włączy się.

UWAGA:

- Jedyny model podgrzewania lub model pompy ciepła jest wybierany za pomocą. pokrętła SW2_1 na płytce drukowanej modułu hydraulicznego, ustawieniem fabrycznym jest model pompy ciepła.
- Tryb ciepłej wody użytkowej wybiera się pokrętłem SW2_4 na płytce drukowanej modułu hydraulicznego, fabrycznie ustawiony jest tryb CWU.



POL

Zapytanie

Naciśnij ten przycisk aby sprawdzić dane.

Naciśnij przycisk Q aby wyświetlić status, następnie naciśnij 🕢 lub nie wykonuj żadnej czynności przez 5 sekund, aby powrócić do ekranu głównego. Naciśnij przycisk 🛆 🛚 aby wyświetlić poniższe dane:

- 1. Ts1: Ustawienie temperatury wody obiegu grzewczego,
- 2. Ts2: Ustawienie temperatury wody użytkowej,
- 3. Tw_in: Temperatura wody na wejściu wymiennika ciepła,
- 4. Tw-out: Temperatura wody na wyjściu wymiennika ciepła,
- 5. T1: Temperatura wody na wyjściu z jednostki wewnętrznej,
- 6. T4: Temperatura otoczenia,
- 7. T6: Temperatura odczytana przez sondę lub sterownik,
- 8. T7: Temperatura wody w zasobniku,
- 9. Pojemność jednostki wewnętrznej,
- 10. Wymagana pojemność w jednostce wewnętrznej,
- 11. Poziom wyjściowy pompy obiegu cieczowego.

UWAGA:

• Moc jednostki należy pomnożyć razy 0,1. Na przykład aby wybrać moc 5HP, należy w punkcie 9 zaznaczyć 50.

Naciśnij ten przycisk aby włączyć lub wyłączyć grzałkę.

Naciśnij przycisk 🔊 gdy jednostka jest w trybie ogrzewania lub gdy jest włączony timer ogrzewania. Pojawi się ikona grzałki jednostki wewnętrznej 📲 Ponownie naciśnij przycisk, a ikona zniknie.

Grzałka elektrycznaNaciśnij przycisk ≥ gdy włączone jest CWU. Pojawi się ikona grzałki zasobnika CWUGrzałka elektryczna. Naciśnij przycisk ponownie, a ikona zniknie.

Naciśnij i przytrzymaj przycisk 🔊 a na głownym ekranie pojawi się "dF" przez 5 sekund i zostanie uruchomiony tryb wymuszonego odmrażania. Poczekaj 5 sekund, aby wrócić do głównego ekranu.



Temperatura +

Naciśnij ten przycisk, aby ustawić temperaturę i czas.

Naciśnij przycisk A bjednokrotnie w głównym menu, w trybie chłodzenia i ogrzewania, aby przejść do regulacji temperatury Ts1 (obiegu grzewczego).

W trybie CWU naciśnij przycisk A j jednokrotnie, aby przejść do regulacji temperatury Ts2 (obiegu CWU).

Jednokrotnie naciśnięcie przycisku zwiększa temperaturę o 10C. Po osiągnięciu maksymalnej temperatury kolejne przyciśnięcie przycisku nic nie zmieni.

W trybie CWU + ogrzewania, po naciśnięciu przycisku A po raz pierwszy, pojawi się ustawienie temperatury Ts1. Naciśnij przycisk I lub nie wykonuj żadnej czynności przez 5 sekund, a zostaniesz przeniesiony do ustawienia temperatury Ts2.





Temperatura -

Naciśnij ten przycisk, aby ustawić temperaturę i czas.

Naciśnij przycisk 📎 🛚 jednokrotnie w głównym menu, w trybie chłodzenia i ogrzewania, aby przejść do regulacji temperatury Ts1 (obiegu grzewczego).

W trybie CWU naciśnij przycisk 🏹 🛛 jednokrotnie, aby przejść do regulacji temperatury Ts2 (obiegu CWU).

Jednokrotnie naciśnięcie przycisku zmniejszy temperaturę o 10C. Po osiągnięciu minimalnej temperatury kolejne przyciśnięcie przycisku nic nie zmieni.

W trybie CWU + ogrzewania, po naciśnięciu przycisku V 🛛 po raz pierwszy, pojawi się ustawienie temperatury Ts1. Naciśnij przycisk 📀 lub nie wykonuj żadnej czynności przez 5 sekund, a zostaniesz przeniesiony do ustawienia temperatury Ts2.

UWAGA:

- Gdy jesteś w trybie CWU: W trybie czuwania lewy ekran wyświetla temperaturę wody na wylocie T1 jednostki wewnętrznej, a środkowy ekran wyświetla temperaturę T7 zasobnika wody. Podczas ustawiania temperatury lewy cyfrowy ekran wyświetla ustawienie temperatury wody po stronie obiegu grzewczego Ts1, a środkowy ekran wyświetla ustawioną temperaturę ciepłej wody użytkowej Ts2.
- Gdy nie jesteś w trybie CWU: W trybie czuwania i ustawiania temperatury, lewy ekran wyświetla temperaturę wody na wylocie T1 jednostki wewnętrznej, a środkowy ekran wyświetla temperaturę wody ustawioną po stronie obiegu grzewczego Ts1.



Ustawienia

Naciśnij ten przycisk, aby zmieniać różne ustawienia.

1. Zegar.

Jednokrotnie naciśnij przycisk 🔅 pojawi się ikona 🕘. Jednokrotnie naciśnij przycisk 🖉 z prawej strony wyświetli się aktualna godzina, a następnie zniknie po 10 sekundach.

Podczas wyświetlania się ikony 🕘 naciśnij przycisk 🔗 , aby przejść do ustawień zegara.

2. Timer tygodniowy

Dwukrotnie naciśnij przycisk 🔅 a pojawi się ikona 🐑. Gdy zaświeci się ikona timera tygodniowego, jednokrotnie naciśnij przycisk 🔗 aby przejść do widoku ustawień.

W widoku ustawień timera tygodniowego naciśnij 🛆 🛚 lub 🏹 🕽 aby sprawdzić:

- 1. Timer włączony: ekran wyświetla ikonę timer na godzinie,
- 2. Timer włączony: ekran wyświetla ikonę timer na ustawieniu temperatury,
- 3. Timer wyłączony: brak ikony na ekranie.

3. Kasowanie pamięci

- Trzykrotnie naciśnij przycisk ↔ środkowy ekran wyświetli 1, co oznacza, że kasowanie pamięci jest włączone (domyślnie). Naciśnij przycisk △ [] lub ♡ [], kiedy wyświetli 0, będzie to oznaczało, że kasowanie pamięci jest wyłączone.
- Przytrzymaj przycisk 🔅 aby skasować tygodniowe ustawienia i zresetować sterownik.

- Czterokrotnie naciśnij przycisk 🔅 pojawi się ikona 🔊. Przytrzymaj przycisk 🄅 , a środkowy ekran wyświetli 0, co oznacza, że sterownik jest w trybie konfiguracji.
- Dodaj pompę ciepła za pomocą aplikacji TUYA przedstawionej na kolejnych slajdach.
- Pobierz Tesla Smart Things App -> (dodaj urządzenie) Add a device / "Large Home Appliances" - "Air Conditioner" -> (połącz z WiFi) Connect a WiFi -> Wprowadź hasło WiFi -> (łączenie) Connecting -> (Pompa ciepła została dodana prawidłowo) Heat Pump is Added Succesfuly

UWAGA:

Ustawienie czasu:

Naciśnij przycisk ^(C), aby wejść do interfejsu ustawień zegara. W tym czasie ikona dnia zegara miga i można ustawić dzień tygodnia. Po wybraniu dnia naciśnij przycisk ^(C), ikona godziny (lewe cyfrowe pole) zacznie migać i będzie można ustawić godzinę. Następnie naciśnij przycisk ^(C), ikona minut (środkowy cyfrowy pole) zacznie migać, możesz ustawić wartość minut, naciśnij przycisk ^(C), aby zakończyć ustawianie i wyjść z operacji ustawiania czasu i powrócić do głównego interfejsu.



POL



Ustawienia

Naciśnij ten przycisk, aby ustawić różne funkcje.

5. Funkcja kompensacji pogodowej (funkcja auto)

Etapy ustawiania sterownika przewodowego

- a. rótkie naciśnięcie przycisku ustawień 6 razy, ustaw środkowy pole cyfrowe na 1, naciśnij przycisk "potwierdź". (A) jest WŁĄCZONE. 1 (z funkcją automatyczną) / 0 (bez funkcji automatycznej)
- b. Wybierz krzywą klimatu ogrzewania, 0~13, 0-brak krzywej, 1~12-krzywa 1~12, 13-krzywa niestandardowa. Jeśli wybierzesz 1~12, naciśnij przycisk "potwierdź", a następnie przejdź do kroku f; jeśli wybierzesz 13, naciśnij przycisk "potwierdź", a następnie przejdź do kroku c.
- c. Indywidualne wprowadzanie wartości krzywej grzewczej. Naciśnij przycisk "w górę" lub "w dół", aby ustawić wartości Min OAT, Max OAT, Min WSP, Max WSP jedna po drugiej. Po ustawieniu jednej wartości naciśnij krótko przycisk "potwierdź", aby przejść dalej. Po zakończeniu ustawiania 4 wartości, przejdź do kroku d.
- d. Wybierz krzywą klimatu chłodzenia, 0~3, 0-brak krzywej, 1~2-krzywa 1~2, 3-krzywa niestandardowa. Jeśli wybierzesz 1~2, naciśnij przycisk "zatwierdź", a następnie przejdź do kroku g; jeśli wybierzesz krzywą 3, naciśnij przycisk "zatwierdź", a następnie przejdź do kroku e.
- e. Wprowadzanie niestandardowej wartości krzywej chłodzenia. Naciśnij przycisk "w górę" lub "w dół", aby ustawić Min OAT, Max OAT, Min WSP, Max WSP wartość jedna po drugiej. Po ustawieniu jednej wartości, naciśnij krótko przycisk "zatwierdź", aby przejść do następnej. Po zakończeniu ustawiania 4 wartości, zakończ wszystkie ustawienia.
- f. Naciśnij przycisk "w górę" lub "w dół", aby ustawić przesunięcie krzywej grzania w zakresie -5~5 °C, domyślnie 0 °C; następnie naciśnij przycisk "potwierdź", aby przejść do kroku d;
- g. Naciśnij przycisk "w górę" lub "w dół", aby ustawić przesunięcie krzywej klimatu chłodzenia w zakresie -5~5 °C, domyślnie 0 °C; następnie naciśnij przycisk "Potwierdź", aby potwierdzić i wyjść.



Krzywa	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
К1	20	40	5	10
К2	20	40	10	18

Niestandardowa krzywa

Krzywa	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
КЗ	0~30	24~50	5~20	5~20



Krzywa	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
К1	- 7	20	20	38
К2	- 5	20	20	33
К3	- 9	20	20	45
К4	- 8	20	40	50
К5	- 5	20	40	55
К6	0	20	40	60
К7	- 20	20	22	42
К8	- 20	20	23	55
К9	- 12.5	20	24	60
K10	- 6	20	25	60
K11	- 1.5	20	26	60
K12	3.5	20	27	60

Niestandardowa krzywa

Krzywa	MinOAT(T4) [°C]	Max OAT(T4) [°C]	Min WSP(TS1)[°C]	Max WSP(TS1)[°C]
K13	- 30~10	10~30	25~40	30~60



POL

Timer tygodniowy

Naciśnij ten przycisk, aby ustawić timer tygodniowy.

Naciśnij i przytrzymaj przycisk A li lub V aby przełączyć elementy ustawień. Gdy ikona ON jest stale wyświetlana, ikona SUN zaczyna migać (miganie wskazuje, że ustawienie jest możliwe do regulacji), krótkie naciśnięcie lub przycisk, aby przełączyć się z SUN-SAT. Po wybraniu dnia naciśnij przycisk akona zaświeci się. Naciśnij ponownie przycisk aby anulować wybór, ikona miga i możesz ją zresetować.

Po zakończeniu ustawiania dni, ikona wybranego dnia wyświetla się ciągle (jeśli nie zostanie wybrany żaden dzień, wybrany zostanie aktualnie migający dzień). Przytrzymaj przycisk VIII, w tym czasie "Godzina" (lewy ekran, wartość początkowa to 08, jeśli wcześniej została ustawiona, wyświetlana jest ostatnia ustawiona wartość - jednostka temperatury nie jest wyświetlana) miga, jednokrotnie naciśnij przycisk III VIII aby wybrać godzinę (00-23). Naciśnij ponownie przycisk VIIII aby anulować wybór.

Po zakończeniu ustawiania "godziny" naciśnij i przytrzymaj przycisk. W tym czasie miga "Minuta" (środkowy ekran, wartość początkowa wynosi 00, jeśli została ustawiona wcześniej, wyświetlana jest ostatnia ustawiona wartość, jednostka temperatury nie jest wyświetlana), jednokrotnie naciśnij A lub V , aby wybrać czas (00-59). Naciśnij ponownie przycisk A, aby anulować wybór.

Po zakończeniu ustawiania czasu naciśnij i przytrzymaj $\forall j$ aby przejść do ustawienia trybu timera.

Jednokrotnie naciśnij przycisk 🚏 miga ikona Ogrzewania -> miga ikona CWU -> miga ikona Chłodzenia -> ikony chłodzenia i CWU migają jednocześnie -> ikony ogrzewania i CWU migają jednocześnie.

Naciśnij przycisk (), aby wybrać tryb, aktualna ikona trybu jest zawsze włączona. Naciśnij ponownie przycisk (), aby anulować wybór, ikona miga i możesz ją zresetować. Gdy ikona trybu miga, wartość temperatury jest zawsze włączona i wyświetlana jako ostatnia ustawiona wartość. Jeśli nigdy nie została ustawiona, domyślna wartość chłodzenia wynosi 7°C, wartość grzania wynosi 45°C, a wartość ciepłej wody użytkowej wynosi 50°C.

Naciśnij ten przycisk, aby ustawić timer tygodniowy.

• Ustawienie temperatury:

Jeśli ustawiony jest tylko tryb chłodzenia lub ogrzewania:

Przytrzymaj przycisk 🏹 🖟 aby wejść do ekranu ustawień temperatury.

Jednokrotnie naciśnij A lub V , aby ustawić różne docelowe temperatury wody w trybie chłodzenia lub ogrzewania. Naciśnij przycisk , A aby wybrać wartość temperatury. (Wartość początkowa temperatury to temperatura ostatnio ustawiona lub temperatura domyślna).

• Jeśli ustawiony jest tylko tryb CWU:

Przytrzymaj 🏹 🛚 aby wejść do ekranu ustawień temperatury.

Jednokrotnie naciśnij $\bigwedge i$ lub $\bigtriangledown i$, aby ustawić inna docelowa temperaturę wody w trybie ciepłej wody użytkowej. Zatwierdź wybraną temperaturę przyciskiem \bigcirc .

Kody błędu

Kody błędu	Opis	Kod błędu	Opis
EO	Błąd wyłącznika przepływowego	E8	Błąd czujnika temperatury wylotowej wymiennika ciepła Tw_out
E1	Błąd komunikacji między jednostkę wewnętrzną, a zewnętrzną	E9	Błąd komunikacji jednostki wewnętrznej ze sterownikiem przewodowym
E2	Błąd czujnika temperatury wylotowej T1	EF	Konflikt trybów
E5	Błąd jednostki zewnętrznej	PO	Zabezpieczenie EEPROM
E6	Błąd czujnika temperatury zasobnika wody T7	P1	Zabezpieczenie przed zbyt wysoką różnicą temperatur między wlotem, a wylotem
E7	Błąd czujnika temperatury wlotowej wymiennika ciepła Tw_in	P2	Zabezpieczenie przed zbyt niskim poziomem wody

Lista kontrolna

No.	Opis	Uwagi
1	Ustawienie temperatury obiegu grzewczego Ts	
2	Ustawienie temperatury CWU Ts2	Jeśli jednostka wewnętrzna nie ma funkcji grzania wody, wyświetli 0.
3	Temperatura wlotowa wymiennika ciepła Tw_in	
4	Temperatura wylotowa wymiennika ciepła Tw_out	
5	Temperatura wylotowa jednostki wewnętrznej T1	
6	Temperatura otoczenia T4	
7	Temperatura odczytywana przed sondę przewodowego sterownika T6	
8	Temperatura zasobnika wody T7	Jeśli jednostka wewnętrzna nie ma funkcji grzania wody, wyświetli 0.
9	Moc jednostki wewnętrznej	HP = wartość * 0,1
10	Wymagana moc jednostki wewnętrznej	HP = wartość* 0,1
11	Wartość wylotowa pompy wodnej	



www.tesla.info