

TESLA

CERAMIC HOB

HV6300MB

User Manual

ENG

SRB



Product images are for illustrative purposes only and may differ from the actual product.

Congratulations on the purchase of your new Induction Hob.

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement.

Consult with your dealer or manufacturer for details.

The diagram above is just for reference. Please take the appearance of the actual product as the standard.

SAFETY WARNINGS

Your safety is important to us. Please read this information before using your cooktop.

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

INSTALLATION

Electrical Shock Hazard

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.

Cut Hazard

- Take care - panel edges are sharp.
- Failure to use caution could result in injury or cuts.

Important safety instructions

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.
- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Warning:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot
- A steam cleaner is not to be used.
- Do not use a steam cleaner to clean your cooktop.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

OPERATION AND MAINTENANCE

Electrical Shock Hazard

- Do not cook on a broken or cracked cooktop. If the cooktop surface should break or crack, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

Health Hazard

- This appliance complies with electromagnetic safety standards.
- However, persons with cardiac pacemakers or other electrical implants (such as insulin pumps) must consult with their doctor or implant manufacturer before using this appliance to make sure that their implants will not be affected by the electromagnetic field.
- Failure to follow this advice may result in death.

Hot Surface Hazard

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the Induction glass until the surface is cool.
- Keep children away.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

Cut Hazard


- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.

Important safety instructions


- Never leave the appliance unattended when in use. Boil over causes smoking and greasy spill overs that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Do not place or leave any magnetisable objects (e.g. credit cards, memory cards) or electronic devices (e.g. computers, MP3 players) near the appliance, as they may be affected by its electromagnetic field.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the cooktop as described in this manual (i.e. by using the touch controls). Do not rely on the pan detection feature to turn off the cooking zones when you remove the pans.
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the cooktop could be seriously injured.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor must be sure that they can use the appliance without danger to themselves or their surroundings.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not place or drop heavy objects on your cooktop.
- Do not stand on your cooktop.
- Do not use pans with jagged edges or drag pans across the Induction glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your cooktop, as these can scratch the Induction glass.
- This appliance is intended to be used in household and similar applications such as: -staff kitchen areas in shops, offices and other working environments; -farm houses; -by clients in hotels, motels and other residential type environments; -bed and breakfast type environments.
- **WARNING:** The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- Children less than 8 years of age shall be kept away unless continuously supervised.

PRODUCT INTRODUCTION

Top View

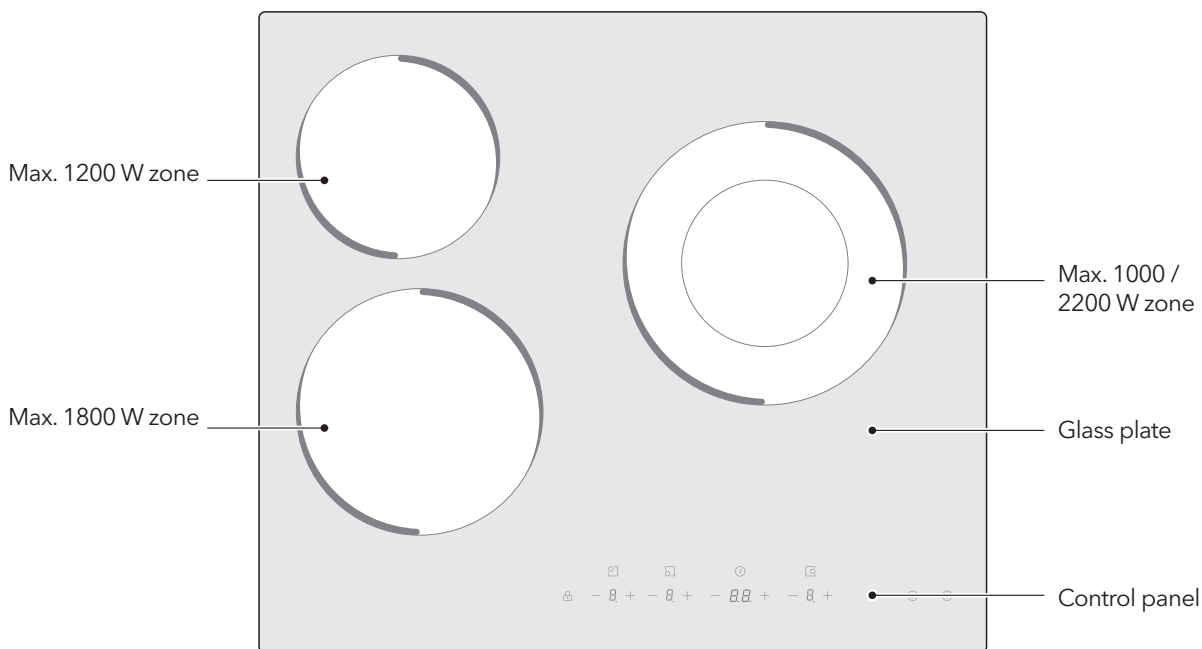

Control Panel

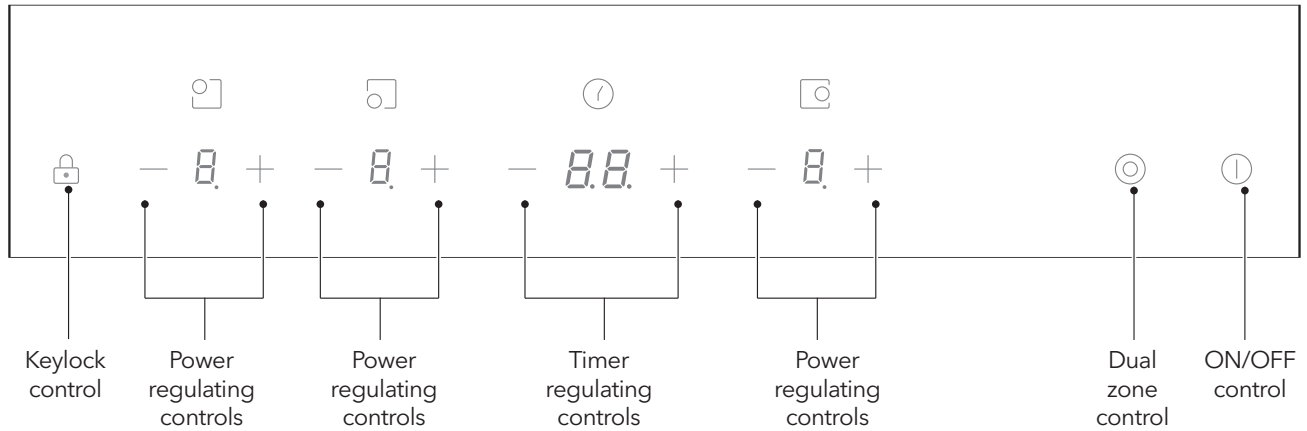

NOTE All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

Product Information

The microcomputer ceramic cooker hob can meet different kinds of cuisine demands because of resistance wire heating, micro-computerized control and multi-power selection, really the optimal choice for modern families.

The ceramic cooker hob centers on customers and adopts personalized design. The hob has safe and reliable performances, making your life comfortable and enabling to fully enjoy the pleasure from life.

Working Principle

This ceramic cooker hob directly employs resistance wire heating, and adjust the output power by the power regulation with the touch controls.

Before using your New Ceramic Hob

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your ceramic hob.

Technical Specification

Cooking Hob	HV6300MB
Cooking Zones	3 Zones
Supply Voltage	220-240V~ 50Hz or 60Hz
Installed Electric Power	4700-5700W
Product Size D×W×H(mm)	590X520X51
Building-in Dimensions A×B (mm)	560X480

Weight and Dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.

QUICK START GUIDE



Take care when frying as the oil and fat heat up very quickly, particularly if you're using PowerBoost. At extremely high temperatures oil and fat will ignite spontaneously and this presents a serious fire risk.

Cooking Tips

- When food comes to the boil, reduce the temperature setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimize the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

Searing steak

To cook juicy flavoured steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.

3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 - 8 minutes per side. Press the steak to gauge how cooked it is - the firmer it feels the more 'well done' it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving.

For stir-frying

1. Choose a ceramic compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

HEAT SETTINGS

The settings below are guidelines only. The exact setting will depend on several factors, including your cookware and the amount you are cooking. Experiment with the Ceramic hob to find the settings that best suit you.

Heat setting	Suitability
1 - 2	<ul style="list-style-type: none"> • delicate warming for small amounts of food • melting chocolate, butter, and foods that burn quickly • gentle simmering • slow warming
3 - 4	<ul style="list-style-type: none"> • reheating • rapid simmering • cooking rice
5 - 6	<ul style="list-style-type: none"> • pancakes
7 - 8	<ul style="list-style-type: none"> • sautéing • cooking pasta
9	<ul style="list-style-type: none"> • stir-frying • searing • bringing soup to the boil • boiling water


PRODUCT INSTALLATION

Selection of installation equipment

Cut out the work surface according to the sizes shown in the drawing.

For the purpose of installation and use, a minimum of 5 cm space shall be preserved around the hole. Be sure the thickness of the work surface is at least 30mm. Please select heat-resistant and insulated work surface material (Wood and similar fibrous or hygroscopic material shall not be used as work surface material unless impregnated) to avoid the electrical shock and larger deformation caused by the heat radiation from the hotplate. As shown below::


NOTE The safety distance between the sides of the hob and the inner surfaces of the worktop should be at least 3mm.

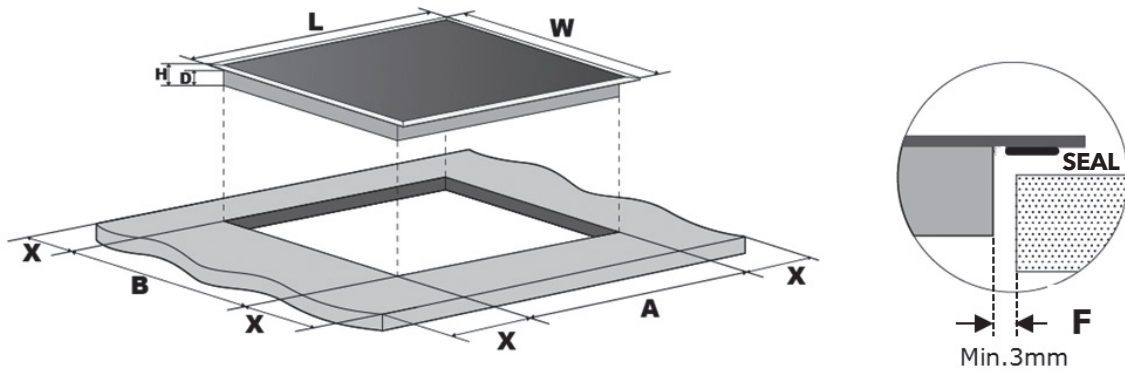

L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)	F(mm)
590	520	51	47	560±2	480±2	50 min	3 min

Under any circumstances, make sure the ceramic cooker hob is well ventilated and the air inlet and outlet are not blocked. Ensure the ceramic cooker hob is in good work state. As shown below


NOTE The safety distance between the hotplate and the cupboard above the hotplate should be at least 760mm.

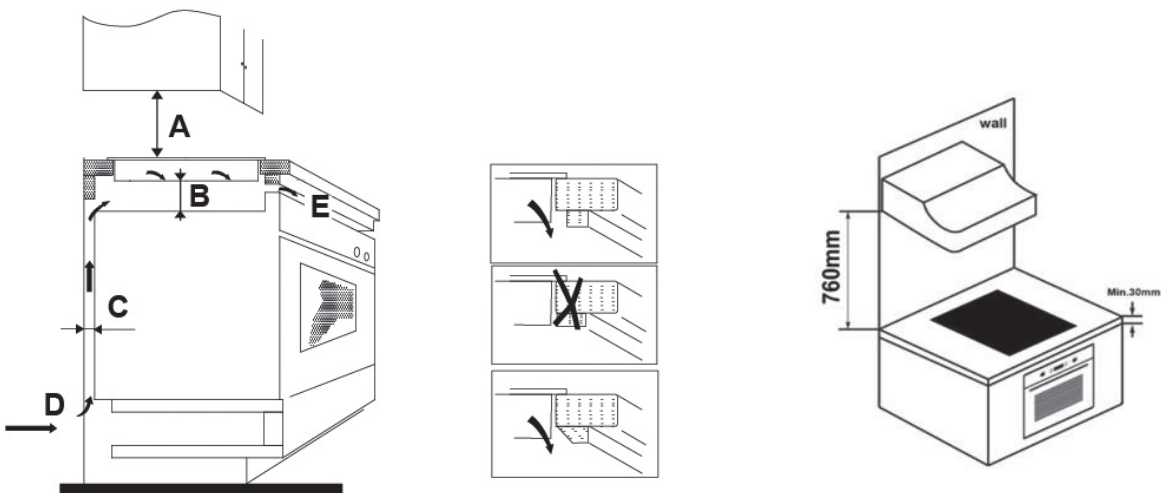

A(mm)	B(mm)	C(mm)	D	E
760	25 min	20 min	Air intake	Air exit 5mm

WARNING! Ensuring Adequate Ventilation

Make sure the ceramic hob is well ventilated and that air inlet and outlet are not blocked. In order to avoid accidental touch with the overheating bottom of the hob, or getting unexpected electric shock during working, it is necessary to put a wooden insert, fixed by screws, at a minimum distance of 50mm from the bottom of the hob. Follow the requirements below.

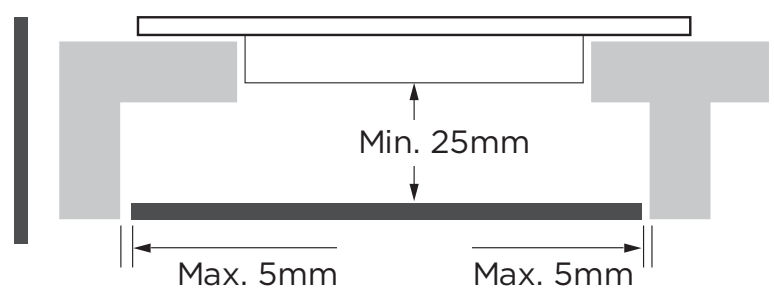

There are ventilation holes around outside of the hob. YOU MUST ensure these holes are not blocked by the worktop when you put the hob into position.




- Be aware that the glue that join the plastic or wooden material to the furniture, has to resist to temperature not below 150°C, to avoid the unstuck of the panelling.
- The rear wall, adjacent and surrounding surfaces must therefore be able to withstand a temperature of 90°C.


Before locating the fixing brackets

The unit should be placed on a stable, smooth surface (use the packaging). Do not apply force onto the controls protruding from the hob.

Fix the hob on the work surface by screw four brackets on the bottom of hob (see picture) after installation.

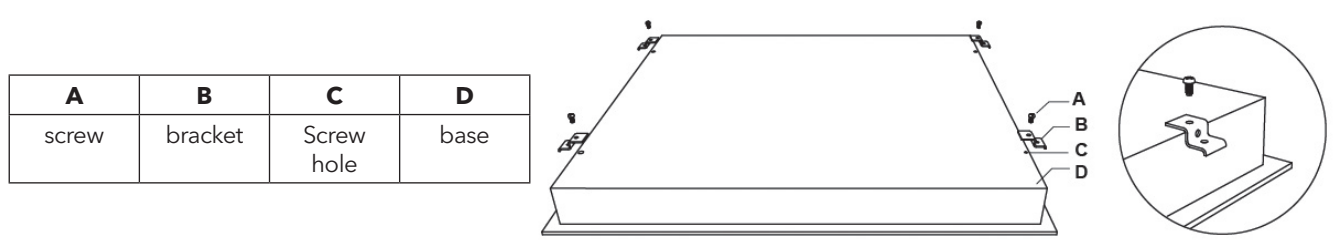

Adjust the bracket position to suit for different work surface's thickness.

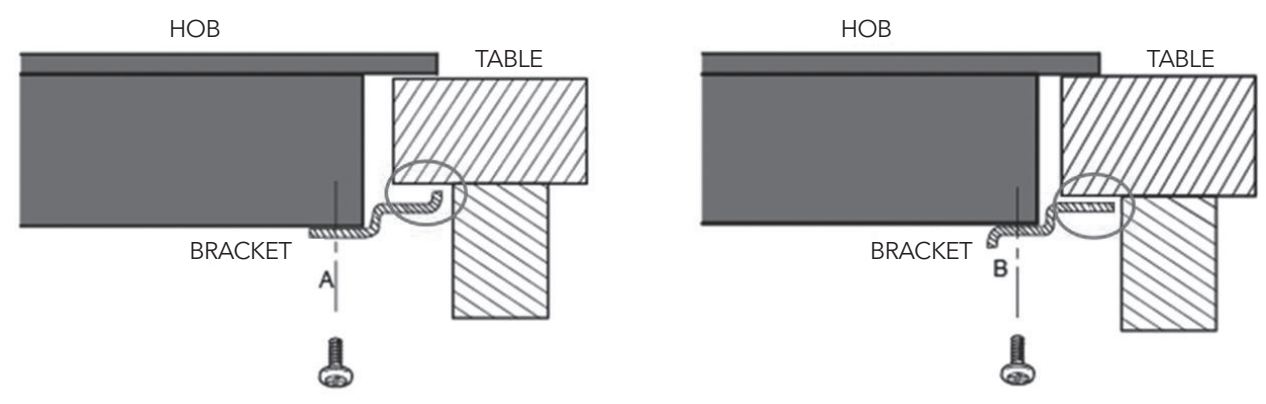


The brackets cannot touch with the inner surfaces of the worktop after installation under any circumstances (see picture).

Cautions

1. The ceramic cooker hob must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The ceramic cooker hob should not be mounted to cooling equipment, dishwashers and rotary dryers.
3. The ceramic cooker hob should be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the work surface should withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
6. A steam cleaner is not to be used.

Connecting the hob to the mains power supply

The power supply should be connected in compliance with the relevant standard, or a single-pole circuit breaker. The method of connection is shown below.

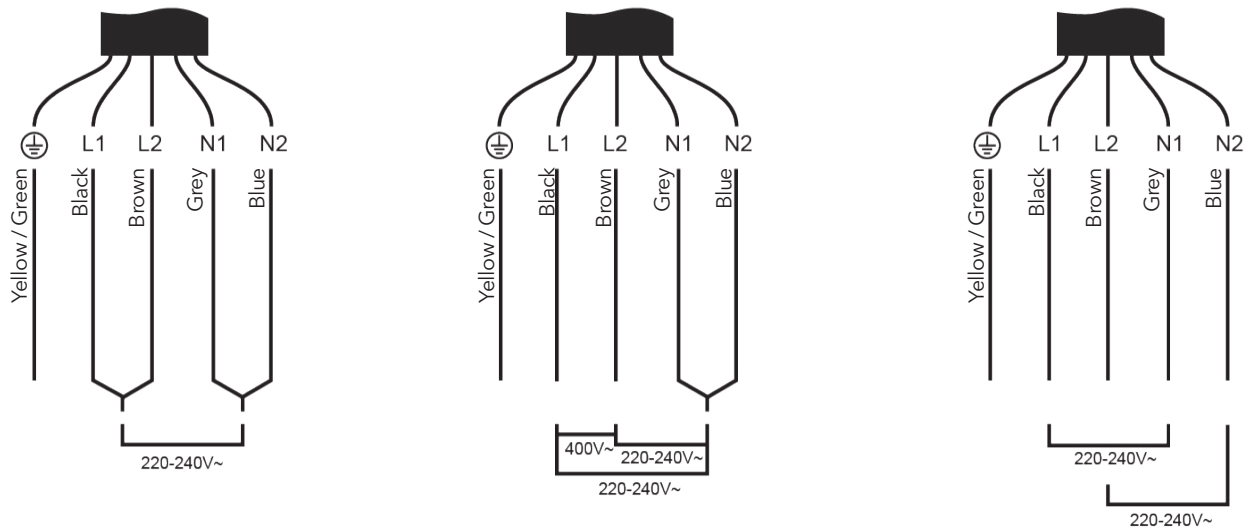

1. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, so as to avoid any accidents.
2. If the appliance is being connected directly to the mains supply, an Omni polar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
3. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
4. The cable must not be bent or compressed.
5. The cable must be checked regularly and only replaced by a properly qualified person.




The bottom surface and the power cord of the hob are not accessible after installation.

OPERATION INSTRUCTIONS

Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

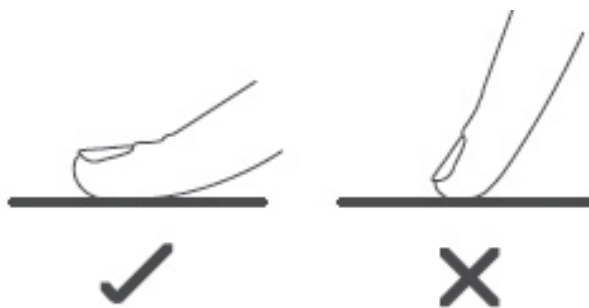


Choosing the right Cookware


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.

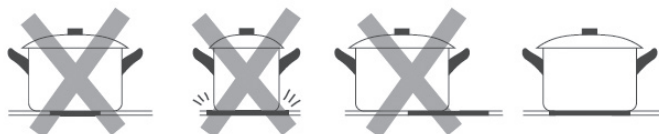


Always lift pans off the ceramic hob - do not slide, or they may scratch the glass.

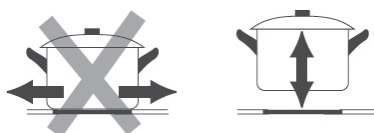

How to use


Start cooking

After power on, the buzzer beeps once, all the indicators light up for 1 second then go out, indicating that the ceramic hob has entered standby mode.

1. Touch the ON/OFF  all the indicators show "0" control.




2. Place a suitable pan on the cooking zone that you wish to use.
 - Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

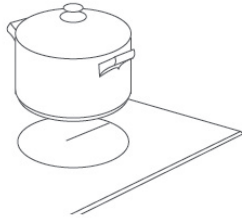


3. Select a heat setting by touching the "-" or "+" control.


- If you don't choose a heat setting within 1 minute, the ceramic hob will automatically switch off. You will need to start again at step 1.
- You can modify the heat setting at any time during cooking.
- By holding down either of these buttons, the value will adjust up or down.

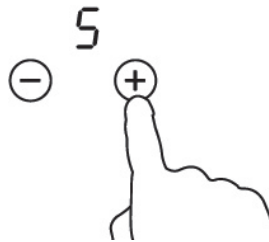


Finish cooking

1. Turn the cooking zone of by scrolling down to "0" or touching "-" and "+" control together.

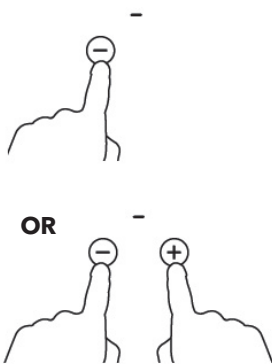

2. Turn the whole cooktop off by touching the ON/OFF  control.

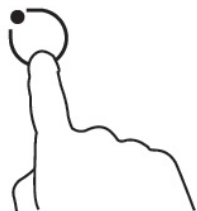


Beware of hot surfaces



"H" will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.

Using the Double zone function

 - The function only work in 3# cooking zone.
- The Double cooking zone has two cooking areas that you can use a central section and an outer section. You can use the central section (A) independently or both sections (B).



Activate the Double zone

1. Adjust the heating setting between power levels 1 and 9 (e.g. 6).



 
2. Central section of the Double cooking zone will switch on.



3. Touching the Double zone control "⊙" once time, the section (B) works.



4. The cooking zone indicator show "≡" and "6" alternately.



Deactivate the Double zone

1. Touching dual zone control "⊙", again, the dual zone function is deactivated.



2. The cooking zone indicator show "6".





NOTE




1. The double loop is available only in 3# cooking zone.
2. You can select the function from level 1 to level 9.
3. You can active the Dual zone only when the 3# cooking zone is selected.

Locking the Controls

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF control are disabled.


To lock the controls	
Touch the lock  control	The timer indicator will show "Lo"

To unlock the controls	
Make sure the ceramic hob is turned on. Touch and hold the lock control  for a while.	

 When the hob is in the lock mode, all the controls are disabled except the ON/OFF , you can always turn the ceramic hob off with the ON/OFF  control in an emergency, but you will need to unlock the hob first in the next operation.



Timer control

- You can use the timer in two different ways:
- You can use it as a minute minder. In this case, the timer will not turn any cooking zone of when the set time is up.
 - You can set it to turn one or more cooking zones of after the set time is up. The timer of maximum is 99 minutes.

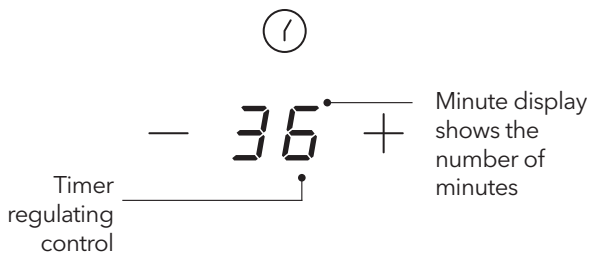


a) Using the Timer as a Minute Minder If you are not selecting any cooking zone


- Make sure the cooktop is turned on.
Note: you can use the minute minder even if you're not selecting any cooking zone.
- Adjust the timer setting by touch the "-" or "+" control. The minute minder indicator will start flashing and will show in the timer display.
- Touching the "-" and "+" together, the timer is cancelled, and the "--" will show in the minute display.

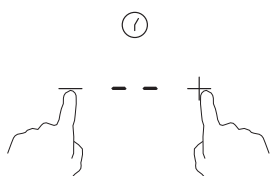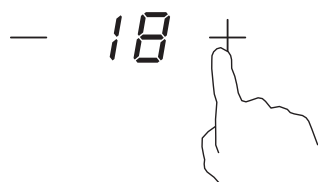

- When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.

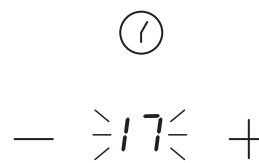

- Buzzer will beep for 30 seconds and the timer indicator shows "--" when the setting time finished.

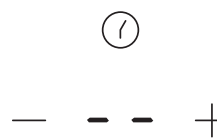


Hint:


- Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute.
- Touch and hold the "-" or "+" control of the timer to decrease or increase by 10 minutes.
- If the setting time exceeds 99 minutes, the timer will automatically return to 0 minute.

b) Setting the timer to turn one or more cooking zones of Set one zone


- Touch the - or + of the corresponding cooking zone you want to set the timer for.

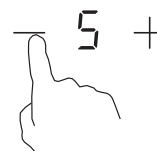

- Set the time by touching the or control of the timer.

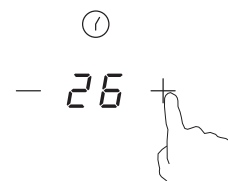


- Touching the "-" and "+" together, the timer is cancelled, and the "--" will show in the minute display.

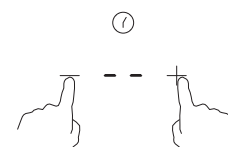

- When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.




- When cooking timer expires, the corresponding cooking zone will be switched of automatically; The display will show "H" which means hot;

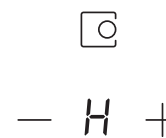

Note

- The red dot next to power level indicator will illuminate indicating that zone is selected.
- If you want to change the time after the timer is set, you have to start from step 1.

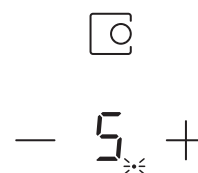


Setting the Timer to Turn one Cooking Zone Of

Set one zone


1. If more than one heating zones use this function, the timer indicator will show the lowest time. (e.g. zone 1# setting time of 5 minutes, zone 2# setting time of 15 minutes, the timer indicator shows "5".)

Note:


1. The red dot next to power level indicator will flash.

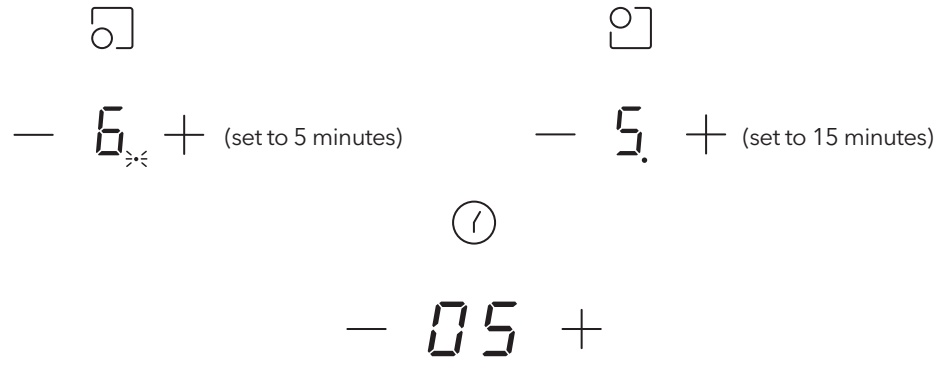

2. Once the countdown timer expires, the corresponding zone will switch of. Then it will show the new min. timer and the dot of corresponding zone will flash.

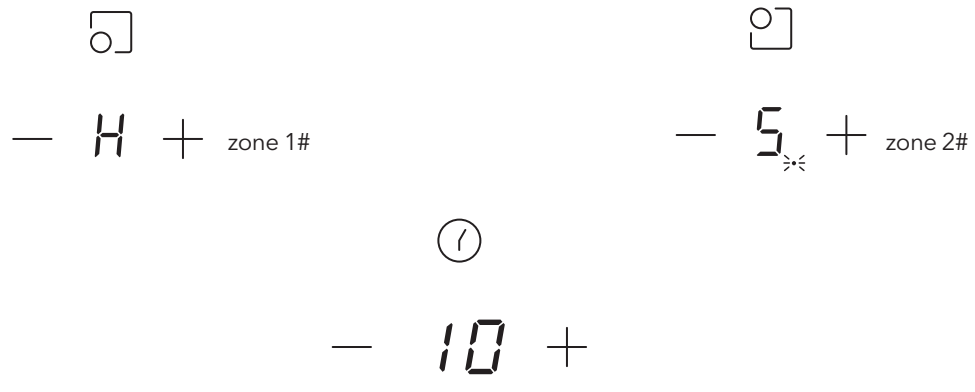


3. When cooking timer expires, the corresponding cooking zone will be switch of automatically.

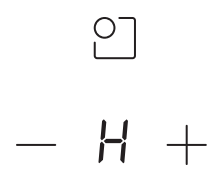

Note:

a) The red dot next to power level indicator will illuminate indicating that zone is selected.

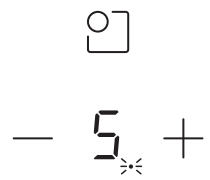

b) If you want to change the time after the timer is set, you have to start from step 1.

Over-Temperature Protection

A temperature sensor equipped can monitor the temperature inside the ceramic hob. When an excessive temperature is monitored, the ceramic hob will stop operation automatically.

Residual Heat Warning

When the hob has been operating for some time, there will be some residual heat. The letter " H "appears to warn you to keep away from it.

Default working times

Another safety feature of the hob is automatic shutdown. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2

CARE AND CLEANING

What?	How?	Important!
Everyday soiling on glass fingerprints, marks, stains left by food or non-sugary spill overs on the glass)	<ol style="list-style-type: none"> 1. Switch the power to the cooktop off. 2. Apply a cooktop cleaner while the glass is still warm (but not hot!) 3. Rinse and wipe dry with a clean cloth or paper towel. 4. Switch the power to the cooktop back on. 	<ul style="list-style-type: none"> • When the power to the cooktop is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care. • Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable. • Never leave cleaning residue on the cooktop: the glass may become stained.
Boil overs, melts, and hot sugary spills on the glass	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for Ceramic glass cooktops, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none"> 1. Switch the power to the cooktop off at the wall. 2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the cooktop. 3. Clean the soiling or spill up with a dish cloth or paper towel. 4. Follow steps 2 to 4 for 'Everyday soiling on glass' above. 	<ul style="list-style-type: none"> • Remove stains left by melts and sugary food or spill overs as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface. • Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.
Spill overs on the touch controls	<ol style="list-style-type: none"> 1. Switch the power to the cooktop off. 2. Soak up the spill 3. Wipe the touch control area with a clean damp sponge or cloth. 4. Wipe the area completely dry with a paper towel. 5. Switch the power to the cooktop back on. 	<ul style="list-style-type: none"> • The cooktop may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the cooktop back on.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Problem	Possible causes	What to do
The cooktop cannot be turned on.	No power.	Make sure the ceramic hob is connected to the power supply and that it is switched on. Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, call a qualified technician.
The touch controls are unresponsive.	The controls are locked.	Unlock the controls. See section 'Using your ceramic cooktop' for instructions.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware. Unsuitable, abrasive scourer or cleaning products being used.	Use cookware with flat and smooth bases. See 'Choosing the right cookware'. See 'CLEANING AND MAINTENANCE'.
Some pans make crackling or clicking noises.	This may be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.

1. The hob is equipped with a self diagnostic function. With this test the technician is able to check the function of several components without disassembling or dismantling the hob from the working surface.
2. Failure code occur during customer using & Solution;

Failure code	Problem	Solution
No Auto-Recovery		
E0	Zero error.	Reinsert the connection between the display board and the power board. Replace the power board.
E1	Ceramic plate temperature sensor failure--open circuit.	Check the connection or replace the ceramic plate temperature sensor.
E2	Ceramic plate temperature sensor failure--short circuit.	
E7	Ceramic plate temperature sensor failure	
C1	High temperature of ceramic plate sensor.	Wait for the temperature of ceramic plate return to normal. Touch "ON/OFF" button to restart unit.
E3	Temperature sensor of the NTC failure--open circuit.	Replace the display board.
E4	Temperature sensor of the NTC failure--short circuit	
EL	Supply voltage is below the rated voltage.	Please inspect whether power supply is normal. Power on after the power supply is normal.
EH	Supply voltage is above the rated voltage.	
EU	Communication error.	Reinsert the connection between the display board and the power board. Replace the power board or the display board.

DISPOSAL AND RECYCLING

Important instructions for environment



Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).


This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to oficial collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

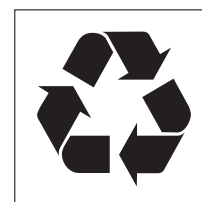

Čestitamo Vam na kupovini Vaše nove keramičke ploče.

Preporučujemo Vam da posvetite neko vreme čitanju ovog Uputstva za upotrebu / Uputstva za instalaciju kako biste u potpunosti razumeli kako da ga pravilno instalirate i rukujete njime. Za instalaciju, molimo Vas da pročitate deo vezan za instalaciju uređaja. Pročitajte sva bezbedonosna uputstva pažljivo pre upotrebe i čuvajte Uputstvo za instalaciju za slučaj da Vam zatreba u budućnosti.

BEZBEDNOSNA UPOZORENJA

Vaša bezbednost nam je važna. Molimo vas da pročitate ove informacije pre korišćenja vaše kuhinjske ploče.

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

INSTALACIJA

Opasnost od električnog udara

- Isključite uređaj iz struje pre nego što izvršite bilo kakve radove ili održavanje na njemu.
- Povezivanje sa dobrom uzemljenom instalacijom je neophodno i obavezno.
- Izmene u domaćem elektroinstalacionom sistemu mogu vršiti samo kvalifikovani električari.
- Nepoštovanje ovog saveta može dovesti do električnog udara ili smrti.

Opasnost od posekotina

- Pazite - ivice panela su oštre.
- Ukoliko ne budete oprezni može doći do povreda ili posekotina.

Važna bezbednosna uputstva

- Pažljivo pročitajte ova uputstva pre instalacije ili korišćenja uređaja.
- Na ovaj uređaj ne smeju se postavljati zapaljivi materijali ili proizvodi u bilo kom trenutku.
- Molimo vas da ove informacije dostavite osobi odgovornoj za instalaciju uređaja, jer to može smanjiti vaše troškove instalacije.
- Kako biste izbegli opasnost, ovaj uređaj mora biti instaliran u skladu sa ovim uputstvima za instalaciju.
- Ovaj uređaj treba pravilno instalirati i uzemljiti isključivo kvalifikovana osoba.
- Ovaj uređaj treba biti povezan na kola koja imaju prekidač koji omogućava potpuno isključivanje sa napajanja.
- Nepotpuna ili nepravilna instalacija uređaja može poništiti bilo koju garanciju ili potraživanje za odgovornost.
- Ovaj uređaj mogu koristiti deca starija od 8 godina i osobe sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima ili bez iskustva i znanja, ako su pod nadzorom ili su im data uputstva o bezbednoj upotrebi uređaja i razumeju povezane opasnosti.
- Deca ne smeju da se igraju sa uređajem. Čišćenje i održavanje uređaja ne smeju obavljati deca bez nadzora.
- Ako je kabl oštećen, mora ga zameniti proizvođač, njegov servisni agent ili slično kvalifikovana osoba kako bi se izbegla opasnost.

- **UPOZORENJE:** Ako je površina napukla, isključite uređaj kako biste izbegli mogućnost električnog udara, za površine kuhinjskih ploča od staklene keramike ili sličnog materijala koji štite aktivne delove.
- Metalni predmeti kao što su noževi, viljuške, kašike i poklopci ne smeju se stavljati na površinu kuhinjske ploče jer se mogu zagrejati.
- Paročistač se ne sme koristiti.
- Ne koristite paročistač za čišćenje vaše kuhinjske ploče.
- Uređaj nije predviđen za upravljanje putem spoljnog tajmera ili odvojenog sistema daljinskog upravljanja.
- **UPOZORENJE:** Opasnost od požara: ne ostavljajte predmete na površinama za kuvanje.
- Proces kuvanja mora se nadgledati. Kratkoročni proces kuvanja mora se neprekidno nadgledati.
- **UPOZORENJE:** Nepraćeno kuvanje na ploči sa masnoćom ili uljem može biti opasno i može dovesti do požara. NIKADA ne pokušavajte da ugasi požar vodom, već isključite uređaj i zatim pokrijte plamen, npr. poklopcem ili vatrogasnim pokrivačem.

RAD I ODRŽAVANJE

Opasnost od električnog udara

- Ne kuvajte na oštećenoj ili napukloj kuhinjskoj ploči. Ako se površina kuhinjske ploče slomi ili napukne, odmah isključite uređaj iz mreže (prekidačem na zidu) i obratite se kvalifikovanom tehničaru.
- Isključite kuhinjsku ploču na zidu pre čišćenja ili održavanja.
- Nepoštovanje ovog saveta može dovesti do električnog udara ili smrti.

Opasnost po zdravlje

- Ovaj uređaj je u skladu sa standardima elektromagnetne bezbednosti.
- Međutim, osobe sa srčanim pejsmejkerima ili drugim električnim implantima (kao što su insulin pumpe) moraju se konsultovati sa svojim lekarom ili proizvođačem implantata pre korišćenja ovog uređaja kako bi se osiguralo da njihovi implantati neće biti pogođeni elektromagnetnim poljem.
- Nepoštovanje ovog saveta može dovesti do smrti.

Opasnost od vruće površine

- Tokom korišćenja, dostupni delovi ovog uređaja će se zagrevati dovoljno da izazovu opekotine.
- Ne dozvolite da vaše telo, odeća ili bilo koji predmet osim odgovarajućeg posuda dodirne indukcije dok se površina ne ohladi.
- Držite decu podalje.
- Drške lonaca mogu biti vruće na dodir. Proverite da drške lonaca ne vise preko drugih aktivnih kuhinjskih zona. Držite drške van domašaja dece.
- Nepoštovanje ovog saveta može dovesti do opekotina.

Opasnost od posekotina

- Oštri nož kuhinjskog strugača je izložen kada je zaštitni poklopac povučen. Koristite ga sa izuzetnim oprezom i uvek ga čuvajte na sigurnom mestu, van domašaja dece.
- Ukoliko niste oprezni, može doći do povreda ili posekotina.

Važna bezbednosna uputstva

- Nikada ne ostavljajte uređaj bez nadzora dok je u upotrebi. Prelivanje može izazvati dim, a masne prolivene tečnosti mogu da se zapale.
- Nikada ne koristite svoj uređaj kao radnu ili skladišnu površinu.
- Nikada ne ostavljajte nikakve predmete ili posude na uređaju.
- Ne stavljajte i ne ostavljajte magnetne predmete (npr.


kreditne kartice, memorijske kartice) ili elektronske uređaje (npr. računare, MP3 plejlere) u blizini uređaja, jer mogu biti pogodeni njegovim elektromagnetnim poljem.

- Nikada ne koristite svoj uređaj za zagrevanje ili grejanje prostorije.
- Nakon korišćenja, uvek isključite zone kuvanja i kuhinjsku ploču kako je opisano u ovom priručniku (tj. korišćenjem kontrola dodira). Ne oslanjajte se na funkciju detekcije posuda da isključite zone kuvanja kada uklonite posude.
- Ne dozvolite deci da se igraju sa uređajem ili da sede, stoje ili se penju na njega.
- Ne čuvajte predmete koji su zanimljivi deci u kabinetima iznad uređaja. Deca koja se penju na kuhinjsku ploču mogla bi biti ozbiljno povređena.
- Ne ostavljajte decu samu ili bez nadzora u području gde se uređaj koristi.
- Deca ili osobe sa invaliditetom koji ograničava njihovu sposobnost korišćenja uređaja treba da imaju odgovornu i kompetentnu osobu koja će ih uputiti u njegovu upotrebu. Odgovorna osoba treba da bude uverena da mogu koristiti uređaj bez opasnosti za sebe ili svoje okruženje.
- Ne popravljajte niti zamenjujte bilo koji deo uređaja osim ako to nije posebno preporučeno u priručniku. Sve druge usluge treba obavljati kvalifikovani tehničar.


- Ne postavljajte ili ne bacajte teške predmete na svoju kuhinjsku ploču.
- Ne stojte na svojoj kuhinjskoj ploči.
- Ne koristite posude sa nazubljenim ivicama i ne vucite posude po staklenoj površini indukcije, jer to može ogrebat staklo.
- Ne koristite jastučice za ribanje ili bilo koja druga jaka abrazivna sredstva za čišćenje vaše kuhinjske ploče, jer to može ogrebat staklo indukcije.
- Ovaj uređaj je namenjen za upotrebu u domaćinstvu i sličnim prostorima kao što su:
 - Kuhinje za osoblje u radnjama, kancelarijama i drugim radnim okruženjima;
 - Seoske kuće;
 - Od strane gostiju u hotelima, motelima i drugim stambenim okruženjima;
 - Smeštajima tipa "bed and breakfast (doručak i spavanje).
- **UPOZORENJE:** Uređaj i njegovi dostupni delovi se zagrevaju tokom korišćenja.
- Potrebno je obratiti pažnju da se izbegne dodirivanje grejnih elemenata.
- Deca mlađa od 8 godina treba da budu podalje, osim ako nisu neprekidno pod nadzorom.

PREGLED PROIZVODA

Gornji prikaz

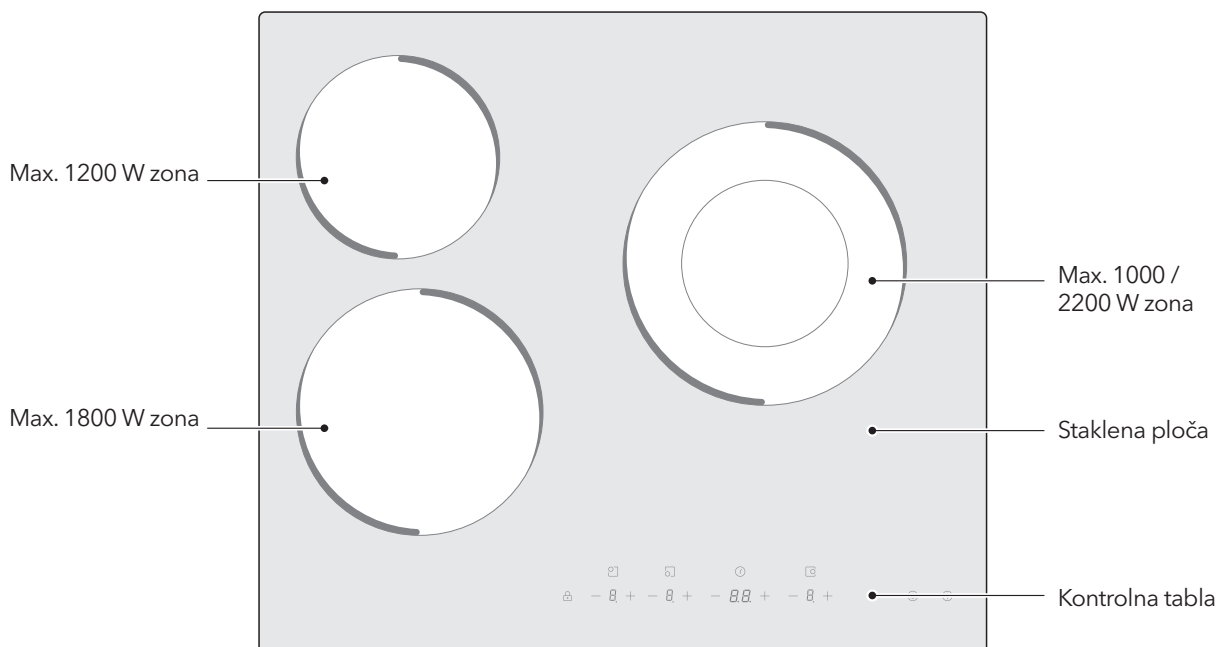

Kontrolna tabla

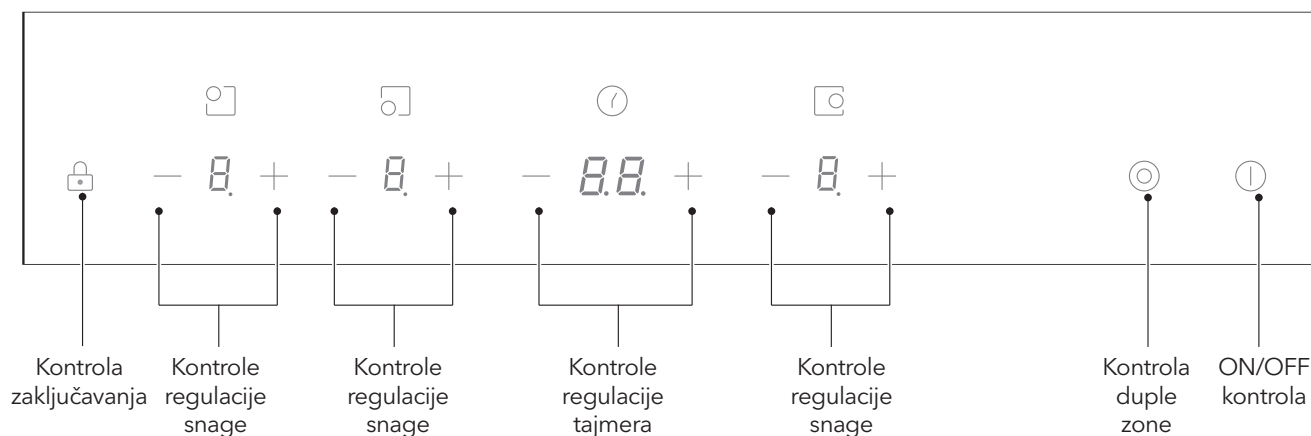

NAPOMENA

Sve slike u ovom priručniku su samo za svrhe objašnjenja. Svaka neslaganja između stvarnog objekta i ilustracije u crtežu podložna su stvarnom predmetu.

Informacije o proizvodu

Mikrokompjuterska keramička ploča za kuvanje može zadovoljiti različite zahteve kulinarstva zahvaljujući grejanju otpornim žicama, mikrokompjuterskoj kontroli i višestrukom izboru snage, što je zaista optimalan izbor za moderne porodice. Keramička ploča za kuvanje je usmerena na kupce i usvaja personalizovani dizajn. Ploča ima sigurne i pouzdane performanse, čineći vaš život udobnim i omogućavajući vam da u potpunosti uživate u zadovoljstvu života.

Princip rada

Ova keramička ploča za kuvanje direktno koristi grejanje otpornim žicama i podešava izlaznu snagu putem regulacije snage sa kontrolama dodira.

Pre upotrebe vaše nove keramičke ploče za kuvanje

- Pročitajte ovaj vodič, obraćajući posebnu pažnju na odeljak 'Upozorenja o sigurnosti'.
- Uklonite sve zaštitne folije koje možda još uvek postoje na vašoj keramičkoj ploči

Tehničke specifikacije

Ploča za kuvanje	HV6300MB
Zone kuvanja	3 Zones
Naponsko napajanje	220-240V~ 50Hz or 60Hz
Instalirana električna snaga	4700-5700W
Dimenzije proizvoda D×Š×V (mm)	590X520X51
Dimenzije za ugradnju A×B (mm)	560X480

Težina i dimenzije su približne. Pošto neprekidno težimo poboljšanju naših proizvoda, možemo promeniti specifikacije i dizajne bez prethodne najave.

VODIČ ZA BRZI POČETAK



Pazite prilikom prženja, jer se ulje i mast veoma brzo zagrevaju, posebno ako koristite PowerBoost. Na ekstremno visokim temperaturama ulje i mast mogu spontano da se zapale, što predstavlja ozbiljan rizik od požara.

Saveti za kuvanje

- Kada hrana proključa, smanjite podešenu temperaturu.
- Korišćenje poklopca će smanjiti vreme kuvanja i uštedeti energiju zadržavanjem toplote.
- Minimizujte količinu tečnosti ili masti kako biste smanjili vreme kuvanja.
- Započnite kuvanje na visokom podešavanju i smanjite kada se hrana zagreje.

Krčkanje, kuvanje pirinča

- Kuvanje na laganoj vatri se dešava ispod tačke ključanja, na oko 85°C, kada se mehurići povremeno uzdižu do površine kuvanih tečnosti. To je ključno za ukusne supe i sočne čorbe jer se ukusi razvijaju bez prekuvanja hrane. Takođe, sosove na bazi jaja i gustine od brašna treba kuvati ispod tačke ključanja.
- Neki zadaci, uključujući kuvanje pirinča metodom apsorpcije, mogu zahtevati podešavanje više od najnižeg kako bi se osiguralo da je hrana pravilno kuvana u preporučenom vremenu.

Pečenje steka

Za pripremu sočnih i ukusnih stekova:

1. Ostavite meso na sobnoj temperaturi oko 20 minuta pre kuvanja.
2. Zagrejte tiganj sa debelim dnom.

3. Premažite obe strane steka uljem. Sipajte malu količinu ulja u zagrejani tiganj, a zatim stavite meso u tiganj.
4. Okrenite stek samo jednom tokom prženja. Tačno vreme pripreme će zavistiti od debljine steka i od toga kako želite da bude pečen. Vremena se mogu kretati od oko 2 do 8 minuta sa svake strane. Pritisnite stek da procenite koliko je pečen - što je čvršći, to će biti bolje pečen.
5. Ostavite stek da odstoji na toplom tanjiru nekoliko minuta kako bi se opustio i postao sočan pre serviranja.

Za prženje u woku:

1. Izaberite keramički kompatibilan wok sa ravnim dnom ili veliki tiganj.
2. Pripremite sve sastojke i opremu. Prženje treba da bude brzo. Ako kuvate velike količine, kuvajte hranu u nekoliko manjih porcija.
3. Kratko zagrejte tiganj i dodajte dve kašike ulja.
4. Prvo ispržite meso, stavite ga sa strane i održavajte toplim.
5. Pržite povrće. Kada postane vruće, ali još uvek hrskavo, smanjite podešavanje na zoni kuvanja, vratite meso u tiganj i dodajte sos.
6. Nežno promešajte sastojke kako biste osigurali da se svi zagreju.
7. Servirajte odmah.

PODEŠAVANJA GREJANJA

Donja podešavanja su samo smernice. Tačno podešavanje će zavistiti od nekoliko faktora, uključujući vaše posude i količinu hrane koju pripremate. Eksperimentišite sa keramičkom pločom da pronađete podešavanja koja vam najviše odgovaraju.

Podešavanje grejanja	Pogodno za
1 - 2	<ul style="list-style-type: none"> • delikatno zagrevanje za male količine hrane • topljenje čokolade, putera i hrane koja brzo gori • lagano kuvanje • sporo zagrevanje
3 - 4	<ul style="list-style-type: none"> • ponovno zagrevanje • brzo kuvanje • kuvanje pirinča
5 - 6	<ul style="list-style-type: none"> • palačinke
7 - 8	<ul style="list-style-type: none"> • prženje • kuvanje testenine
9	<ul style="list-style-type: none"> • prženje u woku • zapečenje • dovođenje supe do ključanja • kuvanje vode


INSTALACIJA PROIZVODA

Izbor instalacione opreme

Izrežite radnu površinu prema veličinama prikazanim na crtežu.

U svrhu instalacije i upotrebe, treba ostaviti minimum 5 cm prostora oko rupe. Uverite se da debljina radne površine iznosi najmanje 30 mm. Molimo vas da izaberete materijal radne površine otporan na toplotu i izolovan (drvo i sličan vlaknasti ili higroskopni materijal ne smeju se koristiti kao materijal radne površine osim ako nisu impregnirani) kako biste izbegli električni udar i veće deformacije izazvane toplotnim zračenjem sa grejne ploče. Kao što je prikazano u nastavku:


NAPOMENA Bezbedna udaljenost između stranica ploče i unutrašnjih površina radne površine treba da bude najmanje 3 mm.

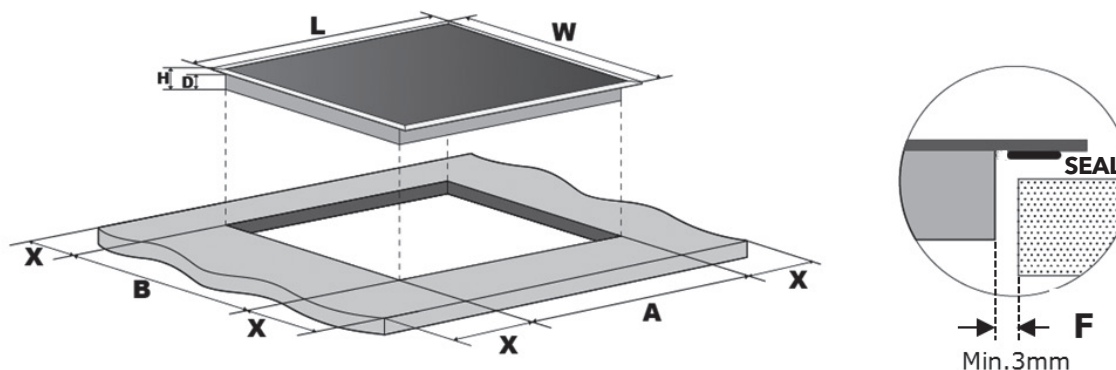

L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)	F(mm)
590	520	51	47	560±2	480±2	50 min	3 min

U svakom slučaju, uverite se da je keramička ploča dobro ventilisana i da su ulazni i izlazni otvori slobodni. Proverite da li je keramička ploča u dobrom radnom stanju. Kao što je prikazano u nastavku.


NAPOMENA Bezbedna udaljenost između grejne ploče i ormarića iznad grejne ploče treba da bude najmanje 760 mm.

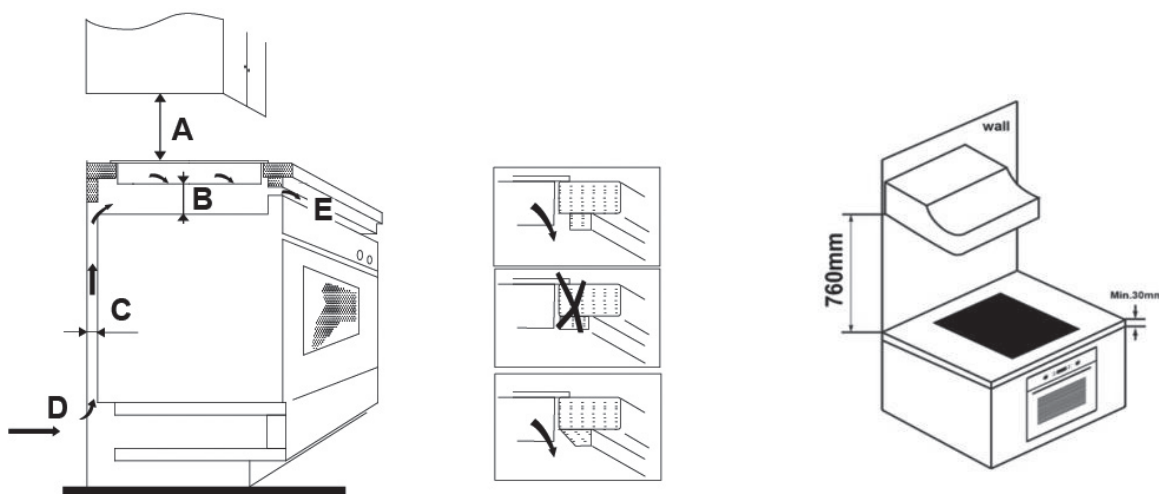

A(mm)	B(mm)	C(mm)	D	E
760	25 min	20 min	Ulaz vazduha	Izlaz vazduha 5mm

UPOZORENJE! Obezbedite adekvatnu ventilaciju

Uverite se da je keramička ploča dobro ventilisana i da su ulazni i izlazni otvori slobodni. Da biste izbegli slučajno dodirivanje pregrejanog donjeg dela ploče ili dobijanje nepredviđenog električnog udara tokom rada, neophodno je postaviti drveni umetak, fiksiran šrafovim, na minimalnoj udaljenosti od 25 mm od donjeg dela ploče. Pratite zahteve u nastavku.

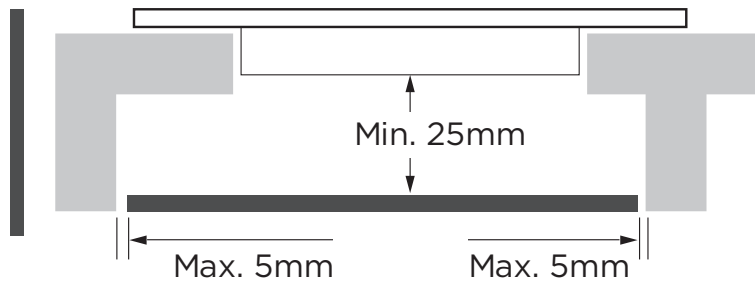

Na spoljašnjoj strani ploče nalaze se ventilacione rupe. MORATE osigurati da ove rupe nisu blokirane radnom površinom kada postavljate ploču na mesto.




- Imajte na umu da lepak koji spaja plastične ili drvene materijale sa nameštajem mora da izdrži temperature ne niže od 150 °C, kako bi se izbeglo odlepljivanje obloge.
- Zadnji zid, kao i susedne i okolne površine, stoga moraju biti otporne na temperature od 90 °C


Pre određivanja lokacije nosača za pričvršćivanje

Uređaj treba postaviti na stabilnu, glatku površinu (koristite ambalažu). Ne primenjujte silu na kontrole koje izbijaju iz ploče.

Fiksirajte ploču na radnu površinu pričvršćivanjem četiri nosača na donjoj strani ploče (vidi sliku) nakon instalacije.

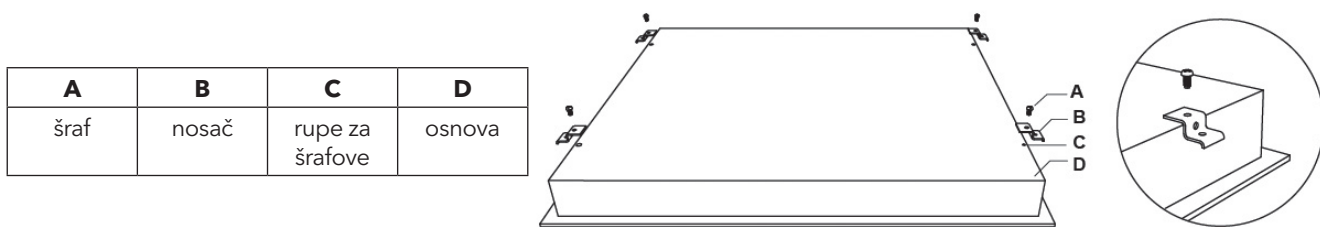

Podesite poziciju nosača prema različitoj debljini radne površine.

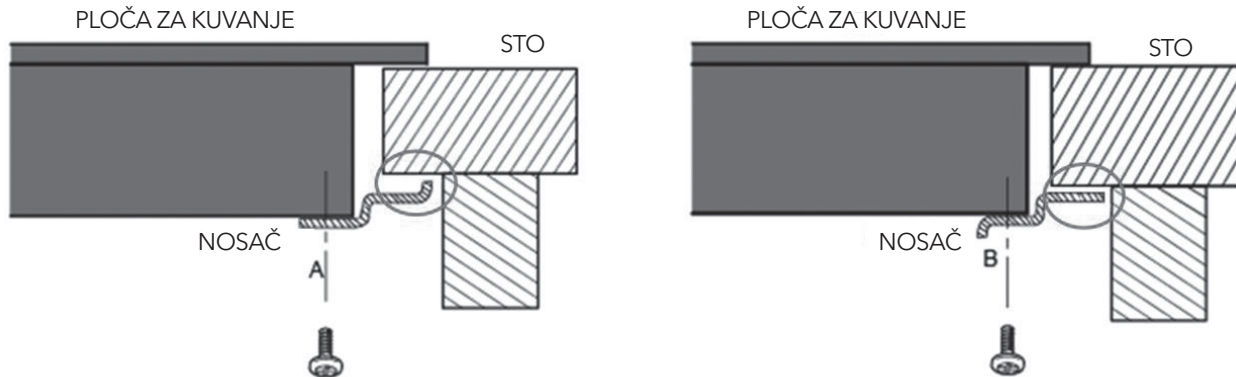


Ni pod kakvim okolnostima, nosači ne smeju dodirivati unutrašnjost radne površine nakon instalacije (vidi sliku).

OPREZ

1. Keramička ploča za kuvanje mora biti instalirana od strane kvalifikovanog osoblja ili tehničara. Naši profesionalci stoje vam na raspolaganju. Molimo vas da nikada ne vršite operaciju sami.
2. Keramička ploča za kuvanje ne sme biti montirana na rashladnu opremu, mašine za pranje sudova i rotacione sušilice.
3. Keramička ploča za kuvanje treba biti instalirana tako da se obezbedi bolja toplotna radijacija kako bi se povećala njena pouzdanost.
4. Zid i indukovana grejna zona iznad radne površine treba da izdrže toplotu.
5. Da bi se izbegla bilo kakva oštećenja, sendvič sloj i lepak moraju biti otporni na toplotu.
6. Paročistač se ne sme koristiti.

Povezivanje ploče sa mrežnim napajanjem

Napajanje treba biti povezano u skladu sa relevantnim standardom ili sa jedнопolarnim automatskim osiguračem. Metod povezivanja je prikazan u nastavku.

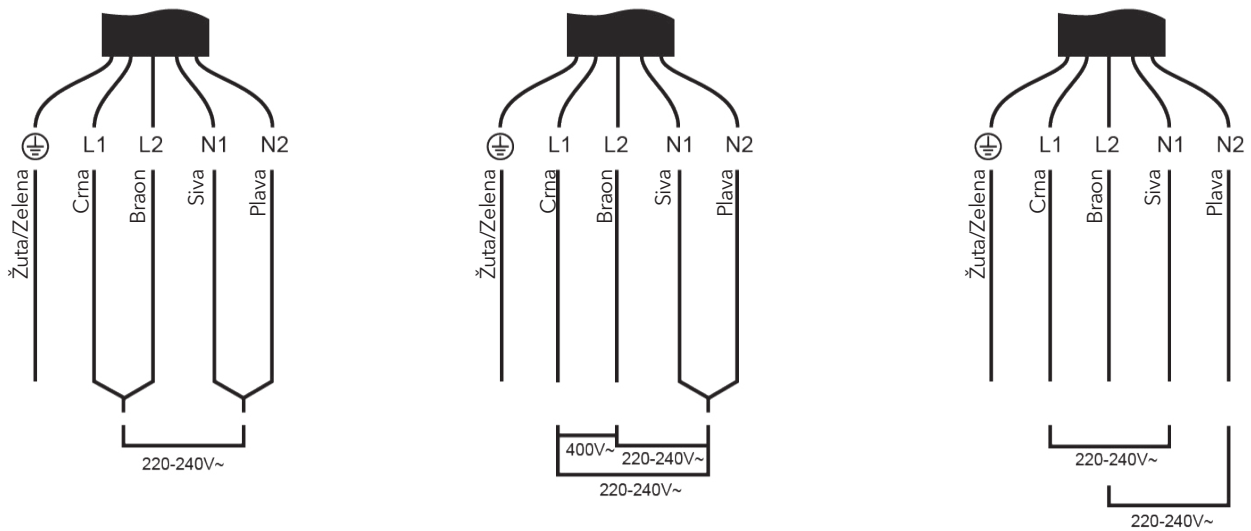

1. Ako je kabl oštećen ili treba da se zameni, to treba da uradi tehničar za postprodajnu podršku koristeći odgovarajuće alate, kako bi se izbegle bilo kakve nezgode.
2. Ako se uređaj povezuje direktno na mrežno napajanje, mora biti instaliran automatski osigurač sa više polova sa minimalnom udaljenošću od 3 mm između kontakata.
3. Instalater mora osigurati da je izvršeno ispravno električno povezivanje i da je u skladu sa bezbednosnim propisima.
4. Kabl ne sme biti savijen ili sabijen.
5. Kabl treba redovno proveravati i samo ga može zameniti kvalifikovana osoba.




Donja površina i napojni kabl ploče nisu dostupni nakon instalacije

UPUTSTVO ZA RAD

Kontrole na dodir

- Kontrole reaguju na dodir, tako da ih ne morate snažno pritiskati.
- Koristite jagodicu svog prsta, a ne vrh.
- Čućete zvučni signal svaki put kada se registruje dodir.
- Uverite se da su kontrole uvek čiste, suve i da na njima nema predmeta (npr. pribora ili krpe) koji ih prekrivaju. Čak i tanak film vode može otežati rad s kontrolama.

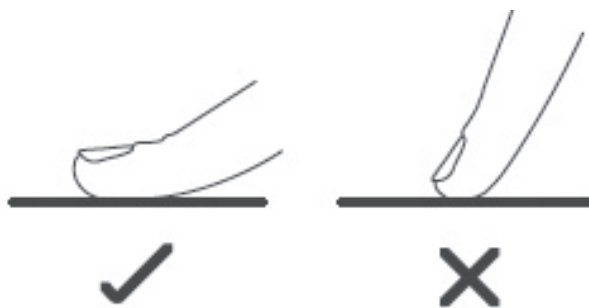


Odabir pravog posuđa


Ne koristite posuđe sa nazubljenim ivicama ili zakrivljenom bazom.



Uverite se da je dno vaše šerpe glatko, da ravno leži na staklu i da je iste veličine kao zona kuvanja. Uvek centrirajte šerpu na zoni kuvanja.

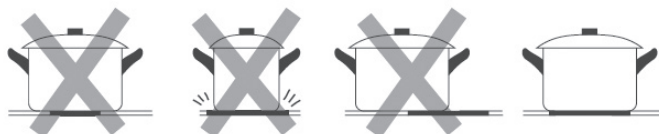


Uvek podižite šerpe sa keramičke ploče - nemojte ih pomerati, jer mogu ogrebatl staklo.

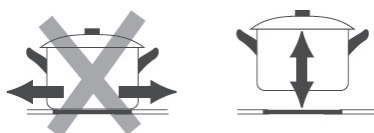


Kako koristiti


Počnite da kuvate

Nakon uključivanja napajanja, zvučni signal će se oglasiti jednom, svi indikatori će se upaliti na 1 sekund, a zatim će se ugasi, što označava da je keramička ploča ušla u stanje pripravnosti.

1. Dodirnite ON/OFF  indikatori prikazuju "-".

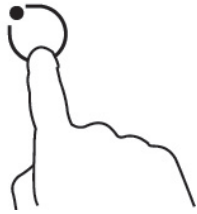


2. Postavite odgovarajuću šerpu na zonu kuvanja koju želite da koristite
 - Uverite se da su dno šerpe i površina zone kuvanja čisti i suvi.

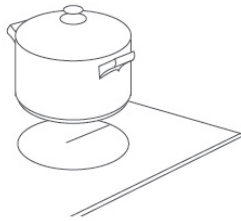


3. Odaberite podešavanje temperature dodiranjem na kontrolu "-" ili "+".


- Ako ne odaberete podešavanje temperature u roku od 1 minute, keramička ploča će se automatski isključiti. Moraćete ponovo da započnete od koraka 1.
- Možete menjati podešavanje temperature u bilo kom trenutku tokom kuvanja.
- Držanjem jednog od ovih dugmadi, vrednost će se prilagođavati naviše ili naniže.

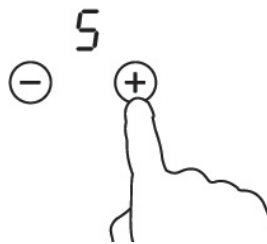


Završite kuvanje

1. Isključite zonu kuvanja pomeranjem na "0" ili dodiranjem na kontrole "-" i "+" zajedno.

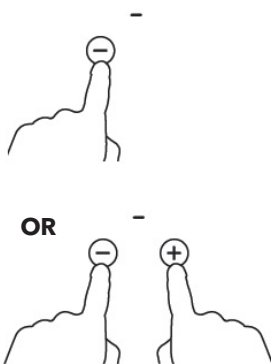

2. Isključite celu kuhinjsku ploču dodiranjem na ON/OFF  kontrolu.

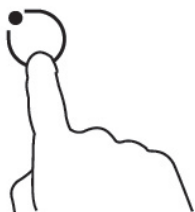


Pazite na vruće površine

— H +

"H" će pokazivati koja zona kuvanja je vruća na dodir. Ona će nestati kada se površina ohladi na sigurnu temperaturu. Takođe se može koristiti kao funkcija uštede energije ako želite da zagrejete dodatne šerpe, koristeći grejnu ploču koja je još uvek vruća.

Korišćenje funkcije duple zone

 - Funkcija radi samo u zoni kuvanja 3#.
- Dupla zona kuvanja ima dva područja kuvanja koja možete koristiti: centralni deo i spoljašnji deo. Možete koristiti centralni deo (A) nezavisno ili oba dela (B).



Aktivirajte duplu zonu

1. Podesite nivo grejanja između nivoa snage 1 i 9 (npr. 6).



 
2. Centralni deo duple zone kuvanja će se uključiti.



3. Dodirivanjem kontrole duple zone "⊙" jednom, deo (B) će raditi. "⊙" once time, the section (B).



4. The cooking zone indicator show "—" and "6" alternately.



Deaktivirajte duplu zonu

1. Ponovnim dodirivanjem kontrole duple zone "⊙", funkcija duple zone se deaktivira.



2. Indikator zone kuvanja prikazuje "6".




NAPOMENA

1. Dupla petlja je dostupna samo u zoni kuvanja 3#.
2. Možete odabrati funkciju od nivoa 1 do nivoa 9.
3. Možete aktivirati duplu zonu samo kada je odabrana zona kuvanja 3#.


Zaključavanje kontrola




- Možete zaključati kontrole kako biste sprečili nenamensku upotrebu (na primer, da deca slučajno uključe zone kuvanja).
- Kada su kontrole zaključane, sve kontrole osim ON/OFF kontrole su onemogućene.

Za zaključavanje kontrola

Dodirnite kontrolu  za zaključavanje	Indikator tajmera će prikazivati "Lo".
---	--


Za otključavanje kontrola


Uverite se da je keramička ploča uključena.
Dodirnite i držite kontrolu za zaključavanje  neko vreme.

 Kada je ploča u režimu zaključavanja, sve kontrole su onemogućene osim ON/OFF  kontrole. U hitnim slučajevima, uvek možete isključiti keramičku ploču pomoću ON/OFF  kontrole, ali prvo treba da otključate ploču za sledeću operaciju.

Kontrola tajmera

- Možete koristiti tajmer na dva različita načina:
- Možete ga koristiti kao minutni podsetnik. U ovom slučaju, tajmer neće isključiti nijednu zonu kuvanja kada vreme istekne.
 - Možete ga podesiti da isključi jednu ili više zona kuvanja nakon što vreme istekne. Maksimalno vreme tajmera je 99 minuta.





 Prikaz minuta pokazuje broj minuta.




Kontrola podešavanja tajmera

a) Korišćenje tajmera kao minutnog podsetnika Ako ne odaberete nijednu zonu kuvanja

- Uverite se da je kuhinjska ploča uključena.
Napomena: možete koristiti minutni podsetnik čak i ako ne odaberete nijednu zonu kuvanja.
- Podesite podešavanje tajmera dodirivanjem kontrole "-" ili "+".
Indikator minutnog podsetnika će početi da trepće i biće prikazan na ekranu tajmera.

- Dodirivanjem "-" i "+" zajedno, tajmer se otkazuje, a "--" će se prikazati na ekranu minuta.


  


- Kada je vreme podešeno, odbrojavanje će odmah početi. Prikaz će pokazivati preostalo vreme, a indikator tajmera će treptati 5 sekundi.





- Zvučni signal će se oglasiti 30 sekundi, a indikator tajmera će prikazivati "--" kada vreme istekne.







Napomena:


- Dodirnite kontrolu tajmera "-" ili "+" jednom da biste smanjili ili povećali za 1 minut.
- Dodirnite i držite kontrolu tajmera "-" ili "+" da biste smanjili ili povećali za 10 minuta.
- Ako podešeno vreme premaši 99 minuta, tajmer će se automatski vratiti na 0 minuta.



b) Podešavanje tajmera da isključi jednu ili više zona kuvanja Podesite jednu zonu

- Dodirnite kontrolu - ili + za odgovarajuću zonu kuvanja za koju želite da podesite tajmer.


 


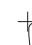

- Podesite vreme dodirivanjem kontrole ili tajmera.



- Dodirivanjem "-" i "+" zajedno, tajmer se otkazuje, a "--" će se prikazati na ekranu minuta.




  


- Kada je vreme podešeno, odbrojavanje će odmah početi. Prikaz će pokazivati preostalo vreme, a indikator tajmera će treptati 5 sekundi.






- Kada vreme kuvanja istekne, odgovarajuća zona kuvanja će se automatski isključiti; Prikaz će pokazivati "H" što znači vruće.






Napomena:

- Crvena tačka pored indikatora nivoa snage će se osvetliti, što označava da je zona odabrana.
- Ako želite da promenite vreme nakon što je tajmer podešen, morate početi od koraka 1






Podešavanje tajmera da isključi jednu zonu kuvanja

Podesite jednu zonu


1. Ako više od jedne grejne zone koristi ovu funkciju, indikator tajmera će prikazivati najkraće vreme.
(npr. podešeno vreme zone 1# je 5 minuta, a podešeno vreme zone 2# je 15 minuta, indikator tajmera će prikazivati "5").

Napomena:


1. Crvena tačka pored indikatora nivoa snage će treptati.

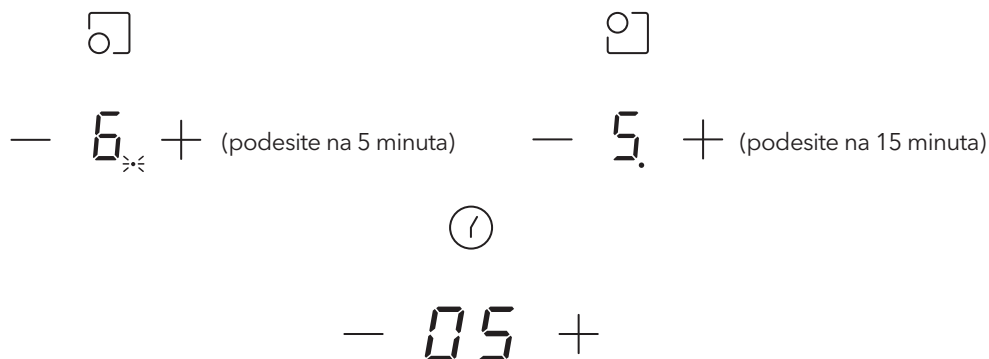

2. Kada odbrojavanje tajmera istekne, odgovarajuća zona će se isključiti. Zatim će prikazati novo minimalno vreme tajmera, a tačka odgovarajuće zone će treptati.

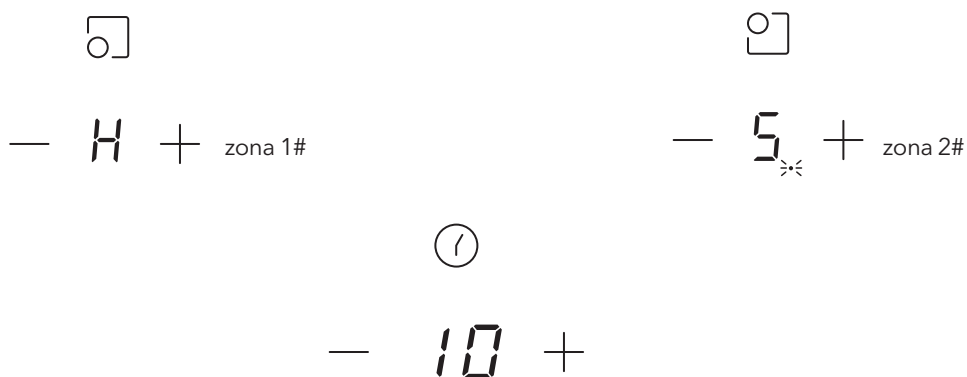


3. Kada vreme kuvanja istekne, odgovarajuća zona kuvanja će se automatski isključiti.

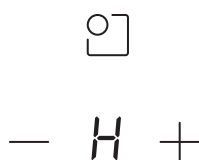

NAPOMENA

a) Crvena tačka pored indikatora nivoa snage će zasvetleti, što ukazuje da je zona odabrana.

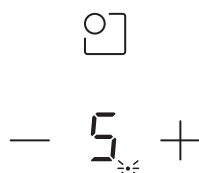

b) Ako želite da promenite vreme nakon što je tajmer podešen, morate početi od koraka 1.

Zaštita od pregrevanja

prekomerna temperatura, keramička ploča će automatski prestati sa radom.

Upozorenje na preostalu toplotu

Kada ploča radi neko vreme, ostaće preostala toplota. Slovo "H" se pojavljuje kako bi vas upozorilo da se klonite tog područja.

Podrazumevano vreme rada

Još jedna sigurnosna funkcija ploče je automatsko isključivanje. Ovo se dešava kada zaboravite da isključite zonu kuvanja.

Podrazumevana vremena isključivanja prikazana su u tabeli ispod:

Nivo snage	1	2	3	4	5	6	7	8	9
Podrazumevano vreme rada (sati)	8	8	8	4	4	4	2	2	2

ČIŠĆENJE I ODRŽAVANJE

Šta?	Kako?	Važno!
Svakodnevno zaprljanje na staklu (otisci prstiju, tragovi, mrlje koje ostavlja hrana ili razlivanje bez šećera na staklu)	<ol style="list-style-type: none"> 1. Isključite napajanje na ploči za kuvanje. 2. Nanesite sredstvo za čišćenje ploče dok je staklo još toplo (ali ne vruće!). 3. Isperite i obrišite suvom, čistom krpom ili papirnim ubrusom. 4. Ponovo uključite napajanje na ploči za kuvanje. 	<ul style="list-style-type: none"> • Kada je napajanje na ploči za kuvanje isključeno, neće biti oznake 'vruće površine', ali zona kuvanja može biti još uvek topla! Povedite posebnu pažnju. • Grubi sunderi, neke najlonske sunderaste krpe i agresivna/abrazivna sredstva za čišćenje mogu ogrebat staklo. Uvek pročitajte etiketu da proverite da li je vaše sredstvo za čišćenje ili sunder pogodno. • Nikada ne ostavljajte ostatke sredstva za čišćenje na ploči za kuvanje: staklo može postati flekavo.
Prolivene tečnosti, rastopljene i vruće šećerne mrlje na staklu	<p>Odmah uklonite sve sa lopaticom, paletnim nožem ili strugačem sa oštricom pogodnim za keramičke ploče za kuvanje, ali budite oprezni sa vrućim površinama zona kuvanja:</p> <ol style="list-style-type: none"> 1. Isključite napajanje na ploči za kuvanje na zidu. 2. Držite oštricu ili pribor pod uglom od 30° i stružite prljavštinu ili ostatke prosute tečnosti u hladno područje ploče za kuvanje. 3. Očistite prljavštinu ili ostatke prosute tečnosti sunderom ili papirnim ubrusom. 4. Pratite korake 2 do 4 za 'Svakodnevno zaprljanje na staklu' navedeno iznad. 	<ul style="list-style-type: none"> • Uklonite mrlje koje ostavljaju rastopljeni i šećerni proizvodi ili prosuta tečnost što je pre moguće. Ako se ostave da se ohlade na staklu, mogu biti teži za uklanjanje ili čak trajno oštetiti površinu stakla. • Rizik od posekotina: kada je sigurnosna zaštita povučena, oštrica u strugaču je izuzetno oštra. Koristite je sa posebnom pažnjom i uvek je čuvajte na sigurnom mestu van domašaja dece.
Prosuta tečnost na kontrolama na dodir	<ol style="list-style-type: none"> 1. Isključite napajanje na ploči za kuvanje. 2. Upijte prolivenu tečnost. 3. Obrišite područje kontrola na dodir čistim vlažnim sunderom ili krpom. 4. Potpuno obrišite područje suvim papirnim ubrusom. 5. Ponovo uključite napajanje na ploči za kuvanje. 	<ul style="list-style-type: none"> • Ploča za kuvanje može ispustiti zvuk i automatski se isključiti, a kontrole na dodir možda neće funkcionisati dok je tečnost na njima. Uverite se da ste obrisali područje kontrola na dodir suvim ubrusom pre nego što ponovo uključite ploču za kuvanje.

REŠAVANJE PROBLEMA

Rad vašeg uređaja može dovesti do grešaka i kvarova. Sledeće tabele sadrže moguće uzroke i napomene za rešavanje poruka o grešci ili kvara. Preporučuje se da pažljivo pročitate tabele ispod kako biste uštedeli vreme i novac koji bi mogli biti potrebni za pozivanje servisnog centra.

Problem	Mogući uzroci	Šta uraditi
Zona kuvanja se ne može uključiti.	Nema napajanja	Proverite da li je keramička ploča povezana na napajanje i da li je uključena. Proverite da li u vašem domu ili oblasti ima prekida napajanja. Ako ste sve proverili i problem se nastavlja, pozovite kvalifikovanog tehničara.
Kontrole na dodir ne reaguju	Kontrole su zaključane.	Otključajte kontrole. Pogledajte deo "Uputstva za korišćenje keramičke ploče za kuvanje".
Kontrole na dodir je teško koristiti.	Moguće je da postoji tanak sloj vode preko kontrola ili možda koristite vrh prsta kada dodirujete kontrole.	Uverite se da je područje kontrola na dodir suvo i koristite jagodicu prsta kada dodirujete kontrole.
Staklo je ogrebano.	Posuđe sa oštrim ivicama. Koristite neprikladne sundere ili abrazivna sredstva za čišćenje.	Koristite posuđe sa ravnim i glatkim dnom. Pogledajte "Odabir pravog posuđa". Pogledajte "ČIŠĆENJE I ODRŽAVANJE".
Neki tiganji proizvode pucketanje ili kucanje.	Ovo može biti uzrokovano konstrukcijom vašeg posuđa (slojevi različitih metala vibriraju drugačije).	To je normalno za neko posuđe i ne ukazuje na kvar.

1. Ploča je opremljena funkcijom samodijagnostike. Ovim testom tehničar može proveriti funkciju više komponenti bez rastavljanja ili skidanja ploče sa radne površine.
2. Kod greške se javlja tokom korišćenja od strane kupca i rešenje;

Kod greške	Problem	Rešenje
Nema automatskog oporavka		
E0	Greška nula.	Ponovo priključite vezu između displej ploče i napajanja. Zamenite ploču napajanja.
E1	Kvar temperaturnog senzora keramičke ploče -- otvoreni krug.	Proverite vezu ili zamenite senzor temperature keramičke ploče.
E2	Kvar senzora temperature keramičke ploče -- kratki spoj.	
E7	Kvar senzora temperature keramičke ploče.	
C1	Visoka temperatura senzora keramičke ploče.	Sačekajte da se temperatura keramičke ploče vrati u normalu. Dodirnite dugme ON/OFF (Uključi/Isključi) da ponovo pokrenete uređaj.
E3	Kvar senzora temperature NTC -- otvoreni krug.	Zamenite displej ploču.
E4	Kvar senzora temperature NTC -- kratki spoj.	
EL	Napon napajanja je ispod nazivne vrednosti.	Molimo vas da proverite da li je napajanje normalno. Uključite kada je napajanje normalno.
EH	Napon napajanja je iznad nazivne vrednosti.	
EU	Greška u komunikaciji.	Ponovo priključite vezu između displej ploče i napajanja. Zamenite ploču napajanja ili displej ploču.

ODLAGANJE I RECIKLAŽA

Važna uputstva za očuvanje životne sredine



Usklađenost sa VEEE direktivom i odlaganje otpadnih proizvoda:
Ovaj proizvod je usklađen sa EU VEEE direktivom (2012/19/EU). Ovaj proizvod nosi klasifikacioni simbol za otpadnu električnu i elektronsku opremu (VEEE).


Ovaj simbol označava da se ovaj proizvod ne sme odlagati sa drugim kućnim otpadom na kraju njegovog radnog veka. Korišćeni uređaj se mora vratiti na zvanično mesto za reciklažu električnih i elektronskih uređaja. Da biste pronašli ove sisteme za prikupljanje, obratite se lokalnim vlastima ili prodavcu kod koga je proizvod kupljen. Svako domaćinstvo ima važnu ulogu u obnavljanju i reciklaži starih uređaja. Odgovarajuće odlaganje iskorišćenog uređaja pomaže u sprečavanju potencijalnih negativnih posledica po životnu sredinu i ljudsko zdravlje.

Usaglašenost sa RoHS Direktivom

Proizvod koji ste kupili je usklađen sa EU RoHS Direktivom (2011/65/EU). Ne sadrži štetne i zabranjene materijale navedene u Direktivama.

Informacije o pakovanju

Materijali za pakovanje proizvoda su proizvedeni od recikliranih materijala u skladu sa našim nacionalnim propisima o životnoj sredini. Ne odlažite materijale za pakovanje zajedno sa kućnim ili drugim otpadom. Odnosite ih na tačke prikupljanja materijala za pakovanje koje su odredile lokalne vlasti.

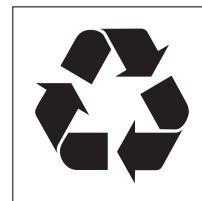

TESLA

tesla.info