

TESLA

BUILT-IN MICROWAVE OVEN

MW2031MW

MW2031MS

MW2031MB

User Manual

ENG

SRB

Read these instructions carefully before using your microwave oven, and keep it carefully. If you follow the instructions, your oven will provide you with many years of good service.

Product images are for illustrative purposes only and may differ from the actual product.



SAVE THESE INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

Model	MW2031MW / MW2031MS / MW2031MB
Rated Voltage/Frequency	230 V~ 50 Hz
Microwave Input	1050 W
Microwave Output	700 W

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode.

Off mode	0.3 W
-----------------	-------

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
6. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly and any food deposits removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
19. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;

- farm houses;
 - bed and breakfast type environments.
21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
 22. Metallic containers for food and beverages are not allowed during microwave cooking.
 23. The appliance shall not be cleaned with a steam cleaner.
 24. The appliance is intended to be used freestanding.
 25. The rear surface of appliances shall be placed against a wall.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

HOUSEHOLD USE ONLY (NOT FOR COMMERCIAL USE)

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



DANGER!

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.



WARNING!

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION!

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

NAMES OF OVEN PARTS AND ACCESSORIES


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

Remove the oven and all materials from the carton and oven cavity.


Your oven comes with the following accessories:

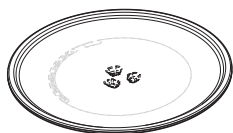

Glass Tray

 


Turntable Ring Assembly

 

Instruction Manual




Turntable Shaft

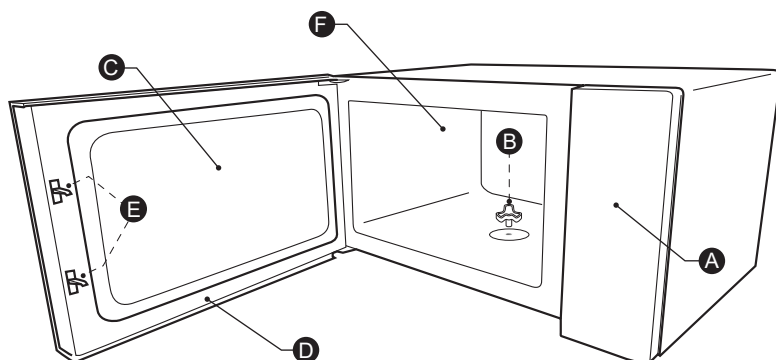

- A. Control panel
- B. Turntable shaft
- C. Observation window
- D. Door assembly
- E. Safety interlock system
- F. Oven cavity


Turntable installation

Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

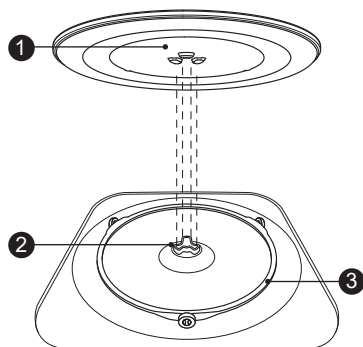

How to put the turntable in place:

1. Place the turntable ring assembly **3** into the recess in the cooking compartment.
2. Place the glass tray **1** on the turntable ring assembly **3**. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray **1** engages in the turntable shaft **2** in the centre of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

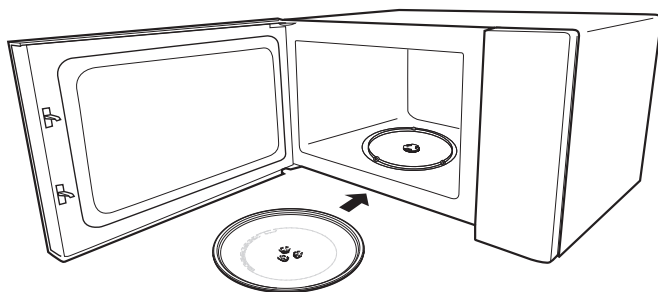

Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Countertop installation


- Remove all packing material and accessories.
- Examine the oven for any damage such as dents or broken door.
- Do not install if oven is damaged.

Cabinet

- Remove any protective film found on the microwave oven cabinet surface.
- Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents

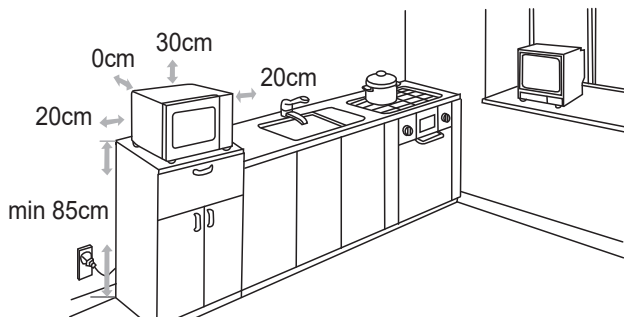

- (1) The minimum installation height is 85cm.
- (2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
- (3) Do not remove the legs from the bottom of the oven.
- (4) Blocking the intake and/or outlet openings can damage the oven.
- (5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**WARNING!**

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.




The accessible surface may be hot during operation.

OPERATION

Control Panel and Features

Operation Instructions

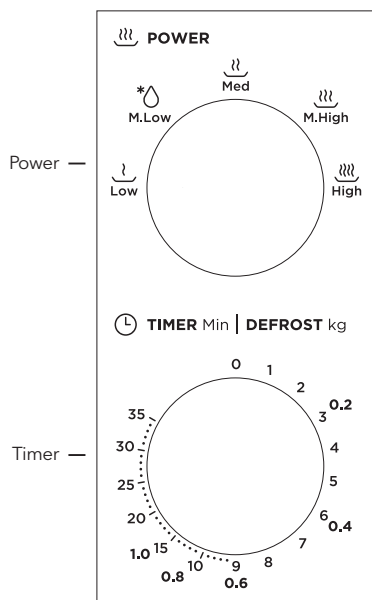

1. To set cooking power by turning the power knob to desired level.
2. To set the time of cooking by turning the timer knob to desired time per your food cooking guide.
3. The microwave oven will automatically start cooking after power level and time are set.
4. After the cooking time is up, the unit will "Dong" to stop.
5. If the unit is not in use, always set time to "0".

Function/Power	Output	Application
Low	17% micro.	Soften ice cream
M.Low	33% micro.	Soup stew, soften butter or defrost
Med	55% micro.	Stew, fish
M.High	77% micro.	Rice, fish, chicken, ground meat
High	100% micro.	Reheat, milk, boil water, vegetables, beverage

NOTE

- When removing food from the oven, please ensure that the oven power is switched off by turning the timer switch to 0 (zero).
- Failure to do so, and operating the microwave oven without food in it, can result in overheating and damage to the magnetron.

TROUBLESHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

TROUBLE	POSSIBLE CAUSE	REMEDY
Oven can not be started.	Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

MERE OPREZA RADI IZBEGAVANJA MOGUĆEG IZLAGANJA PREKOMERNOJ MIKROTALASNOJ ENERGIJI

- (a) Ne pokušavajte da koristite ovu pećnicu dok su vrata otvorena, jer to može dovesti do štetnog izlaganja mikrotalasnoj energiji. Važno je da ne oštetite i ne menjate bezbednosne blokade.
- (b) Ne stavljajte nikakve predmete između prednje strane pećnice i vrata, niti dozvolite da se prljavština ili ostaci sredstva za čišćenje nakupljaju na površinama za zaptivanje.
- (c) UPOZORENJE: Ako su vrata ili zaptivke vrata oštećeni, pećnica se ne sme koristiti dok je ne popravi kvalifikovano lice.

DODATAK

Ako uređaj nije održavan u dobrom stanju čistoće, njegova površina može da se ošteti, što može uticati na vek trajanja uređaja i dovesti do opasne situacije.

SPECIFIKACIJE

Model	MW2031MW / MW2031MS / MW2031MB
Nazivni napon/frekvencija	230 V~ 50 Hz
Ulazna snaga mikrotalasa	1050 W
Izlazna snaga mikrotalasa	700 W

POTROŠNJA ENERGIJE

Informacije o proizvodu vezane za potrošnju energije i maksimalno vreme potrebno da uređaj pređe u odgovarajući režim niske potrošnje.

Režim isključeno	0.3 W
-------------------------	-------

VAŽNA UPUTSTVA O BEZBEDNOSTI

UPOZORENJE!

Da biste smanjili rizik od požara, električnog udara, povrede osoba ili izlaganja prekomernoj mikrotalasnoj energiji prilikom korišćenja vašeg uređaja, pridržavajte se osnovnih mera predostrožnosti, uključujući sledeće:

1. Pročitajte i pridržavajte se posebnih: „Mere opreza radi izbegavanja mogućeg izlaganja prekomernoj mikrotalasnoj energiji“.
2. Ovaj uređaj mogu koristiti deca od 8 godina i starija, kao i osobe sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima, ili osobe bez iskustva i znanja, pod uslovom da su pod nadzorom ili da su dobile uputstvo o bezbednom korišćenju uređaja i razumeju moguće opasnosti. Deca ne smeju da se igraju uređajem. Čišćenje i održavanje uređaja ne smeju obavljati deca bez nadzora.
3. Držite uređaj i njegov kabl van domašaja dece mlađe od osam godina.
4. Ako je naponski kabl oštećen, mora ga zameniti proizvođač, ovlašćeni servis ili osoba sa odgovarajućim kvalifikacijama, kako bi se izbegla opasnost.
5. UPOZORENJE: Uverite se da je uređaj isključen pre zamene lampe kako biste izbegli mogućnost električnog udara.
6. UPOZORENJE: Za bilo koga osim kvalifikovanih osoba je opasno obavljati servis ili popravke koje uključuju uklanjanje poklopca koji štiti od izlaganja mikrotalasnoj energiji.
7. UPOZORENJE: Tečnosti i druga hrana ne smeju se zagrevati u zatvorenim posudama jer postoji opasnost od eksplozije.
8. Prilikom zagrevanja hrane u plastičnim ili papirnim posudama, nadgledajte pećnicu zbog mogućnosti zapaljenja.

9. Koristite samo posuđe pogodno za upotrebu u mikrotalasnim pećnicama.
10. Ako se pojavljuje dim, isključite uređaj ili ga izvadite iz struje i držite vrata zatvorena kako biste ugušili eventualni plamen.
11. Zagrevanje napitaka u mikrotalasnoj može dovesti do odloženog ključanja, pa treba biti pažljiv pri rukovanju posudom.
12. Sadržaj flašica za bebe i teglica sa hranom za bebe treba promešati ili protresti i proveriti temperaturu pre konzumacije kako bi se izbegle opekotine.
13. Jaja u ljusci i cela tvrdo kuvana jaja ne smeju se zagrevati u mikrotalasnoj pećnici jer mogu eksplodirati, čak i nakon završetka zagrevanja.
14. Pećnicu treba redovno čistiti i uklanjati ostatke hrane.
15. Ako se pećnica ne održava čistom, površina može biti oštećena, što može skratiti vek trajanja uređaja i potencijalno izazvati opasnu situaciju.
16. Uređaj ne sme biti ugrađen iza dekorativnih vrata kako bi se izbeglo pregrevanje. (Ne odnosi se na uređaje sa dekorativnim vratima.)
17. Koristite samo temperaturni senzor preporučен za ovu pećnicu (za pećnice koje imaju mogućnost korišćenja temperaturnog senzora).
18. Mikrotalasna pećnica ne sme se postavljati u ormar osim ako je testirana za tu upotrebu.
19. Mikrotalasna pećnica sa dekorativnim vratima mora raditi sa otvorenim dekorativnim vratima.
20. Ovaj uređaj je namenjen za upotrebu u domaćinstvu i sličnim okruženjima, kao što su:
 - kuhinje za osoblje u prodavnicama, kancelarijama i drugim radnim okruženjima
 - od strane gostiju u hotelima, motelima i sličnim rezidencijalnim prostorima;
 - seoske kuće;

-smeštaji tipa bed & breakfast.

21. Mikrotalasna pećnica je namenjena za zagrevanje hrane i pića. Sušenje hrane ili odeće, kao i zagrevanje grejnih jastuka, papuča, sušera, vlažnih krpa i sličnog može izazvati povrede, zapaljenje ili požar.
22. Metalne posude za hranu i piće nisu dozvoljene tokom mikrotalasnog kuvanja.
23. Uređaj se ne sme čistiti parnim čistačem.
24. Uređaj je predviđen za slobodno postavljanje (freestanding).
25. Zadnja površina uređaja treba biti postavljena uz zid.

PAŽLJIVO PROČITAJTE I SAČUVAJTE ZA BUDUĆU UPOTREBU

SAMO ZA DOMAĆINSTVO (NIJE ZA KOMERCIJALNU UPOTREBU)

DA BI SE SMANJIO RIZIK OD POVREDA OSOBA UZEMLJENJE



OPASNOST!

Opasnost od električnog udara

Dodirivanje nekih unutrašnjih komponenti može izazvati ozbiljne povrede ili smrt. Ne rastavljajte ovaj uređaj.



UPOZORENJE!

Opasnost od električnog udara

Nepravilna upotreba uzemljenja može dovesti do električnog udara. Ne priključujte uređaj u utičnicu dok uređaj nije pravilno instaliran i uzemljen.

Ovaj uređaj mora biti uzemljen. U slučaju električnog kratkog spoja, uzemljenje smanjuje rizik od električnog udara tako što obezbeđuje put za odlazak električne struje.

Ovaj uređaj je opremljen kablom sa uzemljujućim provodnikom i uzemljujućom utikačem. Utikač mora biti priključen u utičnicu koja je pravilno instalirana i uzemljena. Obratite se kvalifikovanom električaru ili serviseru ako uputstva za uzemljenje nisu potpuno jasna ili postoji sumnja da uređaj nije pravilno uzemljen.

Ako je neophodno koristiti produžni kabl, koristite isključivo produžni kabl sa tri provodnika.

1. Kratak napojni kabl je obezbeđen kako bi se smanjio rizik od zapetljavanja ili spoticanja o duži kabl.
2. Ako se koristi dugi kabl ili produžni kabl:
 - 1) Oznaka električnog kapaciteta kabla ili produžnog kabla treba da bude najmanje jednaka električnom kapacitetu uređaja.
 - 2) Produžni kabl mora biti tipa sa uzemljenjem i sa tri provodnika.
 - 3) Dugi kabl treba postaviti tako da ne visi preko radne površine ili stola, gde ga deca mogu povući ili gde se može slučajno spotaknuti.

ČIŠĆENJE

Obavezno isključite uređaj iz električne mreže.

1. Očistite unutrašnjost pećnice nakon upotrebe lagano vlažnom krpom.
2. Pribor i dodatke čistite na uobičajen način u sapunici.
3. Okvir vrata, zaptivka i susedni delovi moraju se pažljivo čistiti vlažnom krpom kada su prljavi.
4. Ne koristite agresivne abrazivne proizvode ili oštre metalne strugače za čišćenje stakla vrata pećnice, jer mogu izgrebati površinu, što može dovesti do pucanja stakla.
5. Savet za čišćenje - Za lakše čišćenje zidova unutrašnjosti sa kojima dolazi u dodir hrana: Stavite pola limuna u činiju, dodajte 300 ml vode i zagrevajte na 100% mikrotalasne snage 10 minuta. Zatim obrišite pećnicu mekanom, suvom krpom.

POSUĐE



PAŽNJA!

Opasnost od povrede

Opasno je da bilo ko osim kvalifikovane osobe obavlja servis ili popravke koje uključuju uklanjanje poklopca koji štiti od izlaganja mikrotalasnoj energiji.

Pogledajte uputstva o „Materijalima koje možete koristiti u mikrotalasnoj pećnici ili kojih treba izbegavati“. Postoje određeni nemetalni predmeti koji možda nisu bezbedni za upotrebu u mikrotalasnoj pećnici. Ako ste u nedoumici, možete testirati predmet prema sledećoj proceduri.

Test posuđa

1. Napunite posudu pogodnu za mikrotalasnu pećnicu sa 1 šoljom hladne vode (250 ml) i stavite predmet koji želite testirati.
2. Zagrevajte na maksimalnoj snazi 1 minut.
3. Pažljivo dodirnite predmet. Ako je predmet topao, ne koristite ga za mikrotalasno kuvanje.
4. Ne prekoračujte vreme kuvanja od 1 minuta.

Materijali koje možete koristiti u mikrotalasnoj pećnici

Posuđe	Napomene
Posuda za zapečenje	Pratite uputstva proizvođača. Dno posude za zapečenje mora biti najmanje 3/16 inča (5 mm) iznad rotirajućeg tanjira. Nepravilna upotreba može izazvati pucanje tanjira.
Posuđe	Samo za upotrebu u mikrotalasnoj rerni. Pratite uputstva proizvođača. Ne koristite napuklo ili oštećeno posuđe.
Staklene tegle	Uvek uklonite poklopac. Koristite samo za zagrevanje hrane do blage toplote. Većina staklenih tegli nije otporna na toplotu i može se razbiti.
Stakleni pribor	Samo stakleni pribor otporan na toplotu. Uverite se da nema metalnih delova. Ne koristite napuklo ili oštećeno posuđe.
Vrećice za kuvanje u rerni	Pratite uputstva proizvođača. Ne zatvarajte metalnim vezicama. Napravite zarez kako bi para mogla da izlazi.
Papirni tanjiri i čaše	Koristite samo za kratkotrajno kuvanje/podgrevanje. Ne ostavljajte rernu bez nadzora tokom kuvanja.
Papirni ubrusi	Koristite za pokrivanje hrane prilikom podgrevanja i upijanja masnoće. Koristite pod nadzorom i samo za kratkotrajno kuvanje.
Papir za pečenje	Koristite kao poklopac da sprečite prskanje ili kao omot za kuvanje na pari.
Plastika	Samo za upotrebu u mikrotalasnoj rerni. Pratite uputstva proizvođača. Posude bi trebalo da bude označeno kao „Sigurno za mikrotalasnu“. Neki plastični kontejneri omekšaju kada se hrana u njima zagreje. „Vrećice za kuvanje“ i čvrsto zatvorene plastične kese treba zarezati, probušiti ili napraviti otvore prema uputstvu sa pakovanja.
Plastična folija	Samo za upotrebu u mikrotalasnoj rerni. Koristite za pokrivanje hrane tokom kuvanja kako biste zadržali vlagu. Pazite da plastična folija ne dodiruje hranu.
Termometri	Samo za upotrebu u mikrotalasnoj rerni (termometri za meso i slatkiše).
Vosak papir	Koristite kao poklopac da biste sprečili prskanje i zadržali vlagu.

Materijali koje treba izbegavati u mikrotalasnoj rerni


Posuđe	Napomene
Aluminijumska posuda	Može izazvati varničenje. Prebacite hranu u posudu koja je sigurna za mikrotalasnu rernu.
Kartonska kutija sa metalnom drškom	Može izazvati varničenje. Prebacite hranu u posudu koja je sigurna za mikrotalasnu rernu.
Metalni ili posuđe sa metalnim detaljima	Metal štiti hranu od mikrotalasne energije. Metalni obrub može izazvati varničenje.
Metalne žičane vezice	Može izazvati varničenje i može izazvati požar u rerni.
Papirne kese	Može izazvati požar u rerni.
Plastična pena	Plastična pena može se otopiti ili kontaminirati tečnost unutra kada je izložena visokim temperaturama.
Drvo	Drvo će se osušiti prilikom upotrebe u mikrotalasnoj rerni i može pucati ili se raspuknuti.

NAZIVI DELOVA I DODATAKA PEĆNICE

(U slučaju bilo kakvih razlika između uređaja i slika u ovom priručniku, važi stvarni proizvod.)

Izvadite pećnicu i sve materijale iz kartona i unutrašnjosti pećnice.


Vaša pećnica dolazi sa sledećim dodacima:

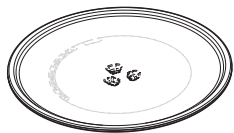

Stakleni tanjir



 
Mehanizam prstena za rotirajući tanjir



Uputstvo za upotrebu




Osovina za rotirajući tanjir

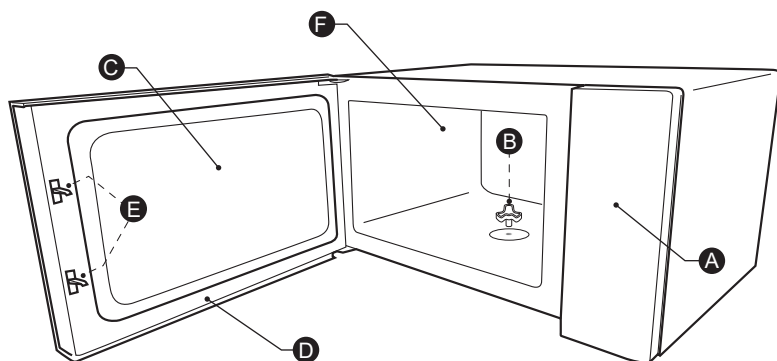

- A. Kontrolna tabla
- B. Osovina rotirajućeg tanjira
- C. Prozor za posmatranje
- D. Vrata pećnice
- E. Sistem sigurnosnih blokada
- F. Unutrašnjost pećnice


Postavljanje rotirajućeg tanjira

Čišćenje komore za kuvanje i postavljanje rotirajućeg tanjira. Za novu instalaciju, uverite se da su svi pakovanja i transportne trake uklonjeni sa osovine rotirajućeg tanjira. Pre prve upotrebe uređaja za pripremu hrane, potrebno je pravilno postaviti rotirajući tanjir. Takođe, obavezno očistite komoru za kuvanje i pribor.

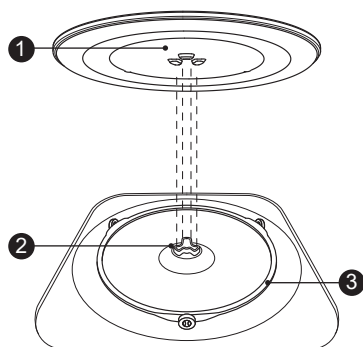

Kako postaviti rotirajući tanjir:

1. Postavite mehanizam prstena za rotirajući tanjir ③ u udubljenje u unutrašnjosti pećnice.
2. Postavite stakleni tanjir ① na mehanizam prstena ③. Poravnajte uzdignute, zakrivljene linije u centru donje strane staklenog tanjira između tri kraka osovine. Uverite se da je stakleni tanjir ① pravilno postavljen na osovinu rotirajućeg tanjira ② u centru dna komore pećnice. Kotrljajući valjci na osovinu treba da se uklapaju u donji rub tanjira.

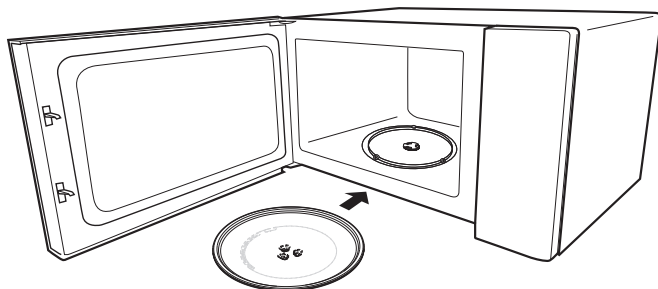

Napomene:

1. Nikada ne koristite uređaj bez rotirajućeg tanjira. Uverite se da je pravilno postavljen. Rotirajući tanjir može se okretati u smeru kazaljke na satu ili suprotno od kazaljke na satu.
2. Nikada ne postavljajte staklenu posudu naopako. Staklena posuda nikada ne sme biti ograničena u kretanju.
3. Tokom kuvanja uvek se moraju koristiti i staklena posuda i prsten za rotirajući tanjir.
4. Sva hrana i posude sa hranom uvek se postavljaju na staklenu posudu za kuvanje.
5. Nikada ne ograničavajte kretanje rotirajućeg tanjira.
6. Ako se staklena posuda ili prsten za rotirajući tanjir napuknu ili polome, obratite se najbližem ovlašćenom servisu.

Postavljanje na radnu površinu


- Uklonite sav ambalažni materijal i dodatke.
- Proverite pećnicu na eventualna oštećenja, poput udubljenja ili polomljenih vrata.
- Ne instalirajte pećnicu ako je oštećena.

Ormarić

- Uklonite zaštitnu foliju sa površine ormarića mikrotalasne pećnice.
- Ne uklanjajte poklopac talasovoda koji je pričvršćen u unutrašnjosti pećnice kako bi zaštitio magnetron.

INSTALACIJA

1. Izaberite ravnu površinu koja obezbeđuje dovoljno otvorenog prostora za usisne i/ili izduvne otvore.

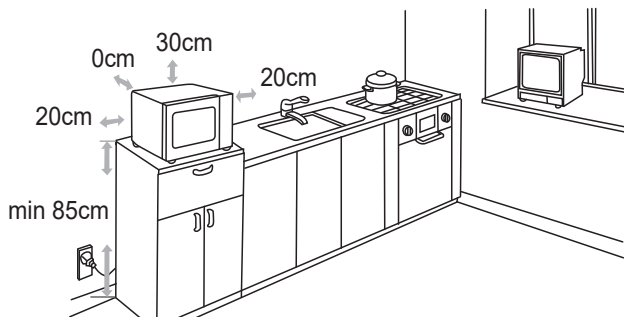

- (1) Minimalna visina instalacije je 85 cm.
 - (2) Zadnja površina uređaja treba da bude postavljena uz zid. Ostavite minimalno rastojanje od 30 cm iznad pećnice. Minimalno rastojanje od 20 cm je potrebno između pećnice i bilo kojih susednih zidova.
 - (3) Ne uklanjajte nogice sa dna pećnice.
 - (4) Blokiranje usisnih i/ili izduvnih otvora može oštetiti pećnicu.
 - (5) Postavite pećnicu što dalje od radio-uređaja i televizora. Rad mikrotalasne pećnice može izazvati smetnje u prijemu radija ili televizije.
2. Priključite pećnicu u standardnu kućnu utičnicu. Uverite se da su napon i frekvencija isti kao napon i frekvencija navedeni na etiketi sa specifikacijama uređaja.



UPOZORENJE!

Ne instalirajte pećnicu iznad šporeta ili drugog uređaja koji proizvodi toplotu. Ako se pećnica postavi u blizini ili iznad izvora toplote, može doći do oštećenja uređaja, a garancija će biti poništena.




Površine koje su dostupne mogu biti vruće tokom rada.

RAD

Kontrolna tabla i funkcije

Uputstva za upotrebu

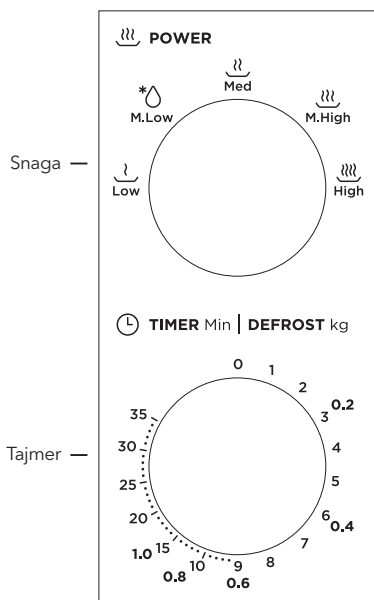

1. Podesite snagu kuvanja okretanjem tastera za snagu na željeni nivo.
2. Podesite vreme kuvanja okretanjem tajmera na željeno vreme prema uputstvu za pripremu hrane.
3. Mikrotalasna pećnica će automatski početi sa kuvanjem nakon što su podešeni nivo snage i vreme.
4. Kada istekne vreme kuvanja, uređaj će oglasiti "Dong" i zaustaviti rad.
5. Ako uređaj nije u upotrebi, uvek podesite vreme na "0".

Funkcija/Snaga	Izlaz	Primena
Nisko	17% mikro.	Omekšavanje sladoleda
Srednje nisko	33% mikro.	Supe i čorbe, omekšavanje putera ili odmrzavanje
Srednje	55% mikro.	Čorbe, riba
Srednje visoko	77% mikro.	Pirinač, riba, piletina, mleveno meso
Visoko	100% mikro.	Podgrevanje, mleko, kuvanje vode, povrće, napici

NAPOMENA

- Kada vadite hranu iz rerne, proverite da li je rerne isključena tako što ćete tajmer okrenuti na 0 (nula).
- Ako to ne uradite i budete koristili mikrotalasnu rernu bez hrane u njoj, može doći do pregrevanja i oštećenja magnetrona.

OTKLANJANJE PROBLEMA

Normalno	
Mikrotalasna rerna ometa prijem televizijskog signala	Prijem radija i televizije može biti ometen dok mikrotalasna rerna radi. Ovo je slično smetnjama koje izazivaju mali električni uređaji, poput miksera, usisivača ili električnog ventilatora. To je normalno.
Slaba svetlost rerne	Prilikom kuvanja u mikrotalasnoj na niskoj snazi, svetlo rerne može postati slabo. To je normalno.
Para se može nakupiti na vratima, a topao vazduh izlazi kroz otvore.	Tokom kuvanja, para može izlaziti iz hrane. Većina će izaći kroz otvore, ali deo se može nakupiti na hladnijim mestima, kao što su vrata rerne. To je normalno.
Rerna je slučajno uključena bez hrane unutra.	Zabranjeno je uključivati uređaj bez hrane unutra. To je veoma opasno.

PROBLEM	MOGUĆI UZROK	REŠENJE
Rerna se ne može uključiti.	Strujni kabl nije čvrsto uključen.	Isključite iz struje. Zatim uključite ponovo nakon 10 sekundi.
	Osigurač je pregoreo ili je aktiviran prekidač na razvodnoj tabli.	Zamenite osigurač ili resetujte prekidač na razvodnoj tabli (popravlja kvalifikovano osoblje naše kompanije).
	Problem sa utičnicom.	Testirajte utičnicu sa drugim električnim uređajima.
Rerna se ne zagreva.	Vrata nisu dobro zatvorena.	Dobro zatvorite vrata.



U skladu sa Direktivom o otpadu električne i elektronske opreme (WEEE), WEEE treba prikupljati i tretirati odvojeno. Ako u budućnosti budete morali da se odvojite od ovog proizvoda, nemojte ga odlagati zajedno sa kućnim otpadom. Ovaj proizvod pošaljite na WEEE punktove za prikupljanje, gde su dostupni.

TESLA

tesla.info

